

Quick Start Guide




DV220FX4
DV220FX4 A

Accessories




Owner's Manual

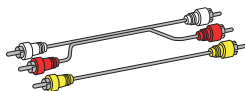

Audio / video cables




Quick Start Guide

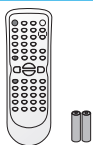


Remote Control (NB681UD / NB681UH)
with AA (1.5V) battery × 2


Basic DVD/VCR Connection

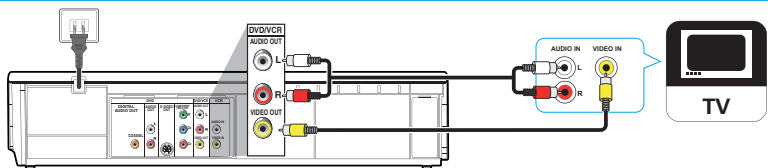

If your TV does not have RCA input, you need to purchase RF Modulator for connection.

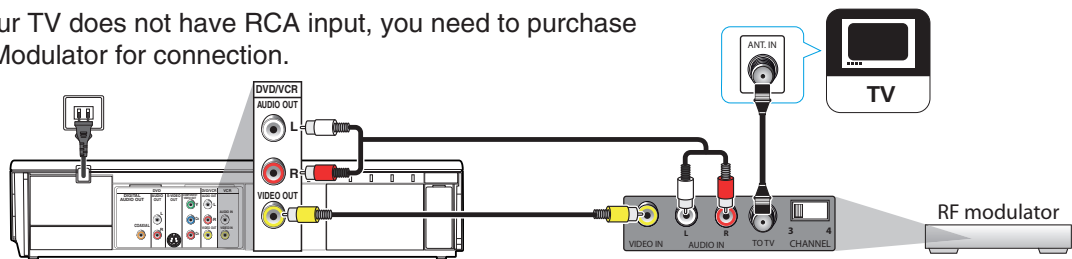

VCR Head Cleaning

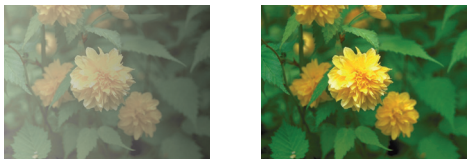


Purchasing and using a VCR head cleaning kit will ensure the best picture quality for playback and recording.


	DVD	VCR
Playback	✓	✓
External Tuner Recording	—	✓
DVD → VCR Recording	—	—
VCR → DVD Recording	—	—
Built in TV Tuner	—	—

Recording

This unit has no tuner system so it cannot receive TV broadcasts without an RF Modulator, external tuner or such devices.

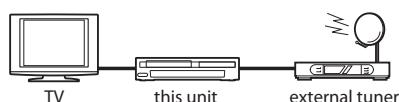

- 1 Press  to turn On the unit. Then insert a recordable tape.

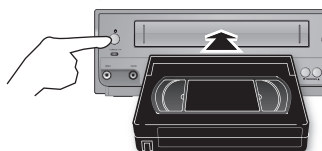


- 2 Press  to switch to the VCR mode.

- 3 Press  until "L1" or "L2" is displayed on the TV screen. Select "L1" to activate rear input jacks. Select "L2" to activate front input jacks.

- 4 Press  to select the desired tape speed.

Tape speed	Recording / playback time		
Type of tape	T60	T120	T160
SP mode	1 hour	2 hours	2-2/3 hours
SLP mode	3 hours	6 hours	8 hours

- 5 Press  until desired duration recording time is selected.

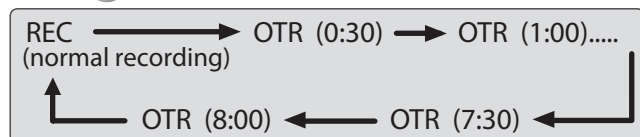

- 6 To stop recording temporarily, press .

- 7 Press  to stop recording.

- 8 Press  to eject the recorded cassette tape.

Need help?

Owner's Manual

For assistance with setup please check the Owner's Manual, that came with the unit.

Online Support

Go to: www.funaiamerica.com

Phone Support

Call 1-877-393-8624 for our customer support.



FUNAI is a registered trademark of Funai Electric Co., Ltd. and may not be used in any way without the express written consent of Funai.



© 2013 Funai Electric Co., Ltd.
Printed in China
E8P6AUD / E8P6AUH / E8P6BUH
1VMN33213A ★★★★★

