

NB500FX4

Blu-ray Disc™/DVD Player

Owner's Manual

INSTRUCCIONES EN ESPAÑOL INCLUIDAS.

























CONTENTS

INTRODUCTION	3
Safety InstructionsSupplied Accessories	
FEATURES	4
Features Product Info Symbols Used in this Owner's Manual	5 5
FUNCTIONAL OVERVIEW	6
Front Panel	6 7 9
CONNECTIONS	10
Connection to a TV Connection to an Audio System HDMI Audio Output	11
BEFORE YOU START	13
Finding a Viewing Video Source Input on You Initial Setup	13
INFORMATION ON PLAYBACK	15
Information on Playback Guide to File List How to Insert a Disc	18
BASIC PLAYBACK	19
Playing Back a DiscPlaying Back Contents from a USB Memory S Using the Title / Disc / Pop Menu	Stick 20 21
SPECIAL PLAYBACK	22
Fast Forward / Fast Reverse	

LIST OF SETTINGS	31
SETUPS	34
fun-Link (HDMI CEC)	34
HDMI Video Resolution	
Parental	36
Software Update	38
Restore Default Settings	
TROUBLESHOOTING	40
LANGUAGE CODE LIST	43
SPECIFICATIONS	
MAINTENANCE	45
TRADEMARK INFORMATION	46
GLOSSARY	48
ESPAÑOL	50
Mando a Distancia	50
Encontrar el Canal de Video en su Televiso	
Instalacion Inicial	
LIMITED WADDANTY	a alı aayıan

1. INTRODUCTION

1.1. Safety Instructions

To Avoid the Hazards of Electrical Shock and Fire

- Do not handle the AC power cord with wet hands.
- Do not pull on the AC power cord when disconnecting it from an AC outlet. Grasp it by the plug.
- Do not put your fingers or objects into the unit.

Location and Handling

- · Do not install the unit in direct sunlight, near strong magnetic fields, or in a place subject to dust or strong vibration.
- Avoid a place with drastic temperature changes.
- Install the unit in a horizontal and stable position. Do not place anything directly on top or bottom of the unit.
 Depending on your external devices, noise or disturbance in the picture and/or sound may be generated if the unit is placed too close to them. In this case, please ensure enough space between the external devices and the unit.
- Depending on the environment, the temperature of this unit may increase slightly. This is not a malfunction.
- Be sure to remove the disc and unplug the AC power cord from the outlet before moving the unit.

Dew Condensation Warning

- Dew condensation may form inside the unit in the following conditions. If so, do not use this unit at least for a few hours until its inside gets dry.
 - The unit is moved from a cold place to a warm place.
 - Under conditions of high humidity.
 - After heating a cold room.

Note about Recycling

- This unit's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations.
- Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.



• For product recycling information, please visit - www.funaiamerica.com
Click on

Protect Our Environment

1.2. Supplied Accessories

- Remote Control (NC265UH)
- Batteries (AAA, 1.5V × 2)
- SETUP MANUAL

FUNAI is a registered trademark of Funai Electric Co., Ltd. and may not be used in any way without the express written consent of Funai.

© 2014 Funai Electric Co., Ltd.

All rights reserved. No part of this manual may be reproduced, copied, transmitted, disseminated, transcribed, downloaded or stored in any storage medium, in any form or for any purpose without the express prior written consent of Funai. Furthermore, any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited. Information in this document is subject to change without notice. Funai reserves the right to change the content herein without the obligation to notify any person or organization of such changes.

2. FEATURES

2.1. Features

Blu-ray Disc™

You can enjoy Blu-ray Disc™ which is capable of storing five times more data than a conventional DVD.

BD-Java

With some Blu-ray discs which contain Java applications, you can enjoy interactive functions such as games or interactive menus.

DVD upscaling for enhanced picture quality

Your current DVD will look even better than before thanks to video upscaling. Upscaling will increase the resolution of standard definition DVD to high definition up to 1080p over an HDMI connection. The picture will be less jagged and more realistic for a near high definition experience.

Enjoy your content on different kinds of media

Full backwards compatibility with DVD, CD and USB Memory Stick ensures that you can continue to enjoy your current audio-video collection. Additionally, you can enjoy AVCHD (for DVD-RW/-R only) / JPEG files.

Listen to rich multi-channel surround sound

Multi-channel surround sound, which realizes real-to-life sound and makes you feel that you are really there.

Easy and simple connection to your HDTV via HDMI

Connect this unit to your HDTV with one single HDMI (High-Definition Multimedia Interface) cable. It is recommended to use a High Speed HDMI cable for better compatibility. The high definition video output signal will be transferred to your HDTV without conversion to analog signals, so you will get excellent picture and sound quality, completely free from noise. Thanks to other multiple outputs, you can also easily connect to your home theater system or amplifier.

fun-Link (HDMI CEC) (Consumer Electronics Control)

This unit supports fun-Link (HDMI CEC), which allows integrated system control over an HDMI cable and is part of the HDMI standard. This function may not work properly on some devices.

PiP (BONUSVIEW™)

Some BD-videos have the PiP function which enables you to display the Secondary Video in the Primary Video. You can call up the Secondary Video by pressing **[MODE]** whenever the scene contains a Secondary Video.

Pop Menu

Some BD-videos have a Pop Menu which is a navigation menu that can be called up and be operated on the TV screen without interrupting playback. You can call up the Pop Menu by pressing **[POP MENU/MENU]**. Contents in the Pop Menu vary depending on the disc.

HDMI Deep Color

Deep Color reduces posterization (color banding) effect of the playback image.

HDMI 1080p/24 output (Blu-ray Disc™ only)

This unit is equipped with the feature which can provide smooth movement during playback of film originated material with the frame rate of 24 frames per second with progressive. (Available only when the display device is connected with an HDMI cable.) Refer to "HDMI Video Resolution" on page 35.

Playing back contents from a USB Memory Stick

You can play back JPEG files stored on a USB Memory Stick. BD-ROM discs sometimes store picture-in-picture commentary, subtitles or other extras on a USB Memory Stick for use during playback with the BD-video.

Playing back AVCHD files

This unit supports playback of AVCHD format files (new format for high definition video camcorders) recorded on a disc / SD Memory Card using USB card reader / USB hub (not supplied). Your high definition personal archive is playable in HD quality.

x.v.Color

This unit supports playback of video contents on discs recorded with "x.v.Color" technology. To watch this video content with the "x.v.Color" space, a TV or other display device supporting both video image reproduction using "x.v.Color" standard and capability of manual switching of its color space setting is required. Please refer to the user manual of your display device for further information.

2.2. Product Info

"Product Info" screen provides information about this unit's software version.

You can also download the latest software from the Funai website and update it yourself if it is newer than the version currently on your unit. The current version of software on your unit can be seen on the "Product Info" screen. To access "Product Info", follow the procedure below.

- 1. Press [HOME].
- 2. Use $[\triangle / \nabla / \triangle /]$ to select "Settings", then press [OK].
- 3. Use [▲ / ▼] to select "Others", then press [OK].
- 4. Use [▲ / ▼] to select "Product Info", then press [OK].

2.3. Symbols Used in this Owner's Manual

To specify which media type each function is applicable to, the following symbols that are at the beginning of each Symbol type.

Symbol	Description
O BD VIDEO	Description refers to BD-video
O DVD VIDEO	Description refers to DVD-video
(O) CD	Description refers to audio CD / DTS-CD
AVCHD	Description refers to DVD-RW/-R with AVCHD files
JPEG	Description refers to BD-RE/-R, DVD-RW/-R, CD-RW/-R and USB Memory Stick with JPEG files

If you do not find any of the symbols listed above under the function heading, the operation is applicable to all media.

3. FUNCTIONAL OVERVIEW

3.1. Front Panel



- * The unit can also be turned on by pressing this button.
- 1. Disc tray
- 2. ▲ (OPEN/CLOSE) button*
- 3. ((POWER-ON) button

- 4. Power-On indicator
 - · Flashes while unit is starting up.
 - Dims and flickers when IR remote signal is received.
- 5. Infrared sensor window
- 6. USB Input

Caution

- Do not connect any device other than USB Memory Stick or USB card reader into the USB Input. (e.g. PC, external HDD, digital camera, keyboard, mouse, etc.)
- When connecting a USB Memory Stick, connect it directly to the USB Input. Do not use a USB extension cable.

⊜ Note

Due to new ENERGY STAR® requirements, this unit will automatically turn on the screen saver after 5 minutes of
inactivity and enter standby mode after 25 minutes of inactivity.

3.2. Rear Panel




1. AC power cord

2. HDMI OUT jack

Caution

- Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.
- This unit does not have a TV RF modulator.

3.3. Remote Control

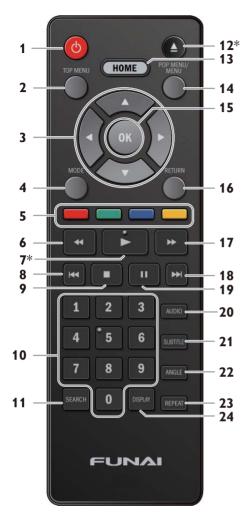

* The unit can also be turned on by pressing these buttons.

1. () (POWER-ON) button

 Press to Turn On the unit, or to switch the unit into Standby mode. (To completely Turn Off the unit, you must unplug the AC power cord.)

2. TOP MENU button

Blu-ray Disc™: Press to display the Top Menu. **DVD:** Press to display the Title Menu.

3. ▲ / **▼** / **◄** / **▶** buttons

· Press to select items or settings.

4. MODE button

· During playback, press to display the Play Menu.

5. RED / GREEN / BLUE / YELLOW buttons

 Press to activate shortcut keys on some BD-video functions. When a file list is shown, press to switch between pages.

6. **◄** (REVERSE) button

· During playback, press to Fast Reverse the playback.

7. ► (PLAY) button*

Press to start playback or resume playback.

8. ◄ (SKIP) button

- During playback, press once to return to the beginning of the current Title, Chapter, Track or File.
- During playback, press twice to return to the previous Title, Chapter, Track or File.
- During the JPEG playback, press to return to the previous File.

9. **■** (STOP) button

• Press to Stop playback.

10. NUMBER buttons

- · Press to select a Chapter during playback.
- Press to enter Numbers or letters in the input field.

11. SEARCH button

· Press to display the Search Menu.

12. ▲ (OPEN/CLOSE) button*

· Press to Open or Close the disc tray.

13. HOME button

• Press to display the Home Menu.

14. POP MENU/MENU button

Blu-ray Disc™: Press to display the Pop Menu. **DVD:** Press to display the Disc Menu.

15. OK button

· Press to confirm or select menu items.

16. RETURN button

 Press to Return to the previously displayed menu or screen function.

17. ▶▶ (FORWARD) button

- During playback, press to Fast Forward the playback.
- When playback is in pause, press to Slow Forward the playback.

18. ▶► (SKIP) button

- During playback, press to Skip to the next Chapter, Track or File.
- When playback is in pause mode, press to Forward the playback picture by picture.

19. II (PAUSE) button

· Press to Pause playback.

20. AUDIO button

 Press to select the Audio Channel (such as audio languages) on a disc.

21. SUBTITLE button

· Press to select Subtitles on a disc.

22. ANGLE button

· Press to access various camera Angles on the disc.

continued on next page

23. REPEAT button

• Press to select Repeat mode.

24. DISPLAY button


• Press to Display the on-screen display menu.

⊜ Note

- The Power-On indicator on the front panel dims and flickers when it receives the IR signal from the remote control.
- Use the supplied remote control. Remote-control operation on any other remote control, such as a universal remote control, is not guaranteed.

■ Installing the Batteries in the Remote Control

Install 2 AAA (1.5V) batteries matching the polarity indicated inside battery compartment of the remote control.

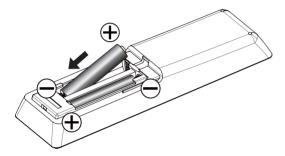

Caution


Incorrect use of batteries can result in hazards such as leakage and bursting. Please observe the following:

- Lithium or ni-cad and ni-mh rechargeable batteries are not recommended to use for remote control.
- Do not mix different types of batteries such as alkaline and standard (carbon-zinc).
- Do not mix new and old batteries together.
- Do not use different kinds of batteries together.
 Although they may look similar, different batteries may have different voltages.
- Make sure that the + and ends of each battery match the indications in the battery compartment.
- Remove batteries from battery compartment, when the remote is not going to be used for a month or more.
- When disposing of used batteries, please comply with governmental regulations or environmental public rules that apply in your country or area.
- Do not recharge, short-circuit, heat, burn or disassemble batteries.

■ Using the Remote Control

Remote Control Usage Guidelines:


- Make sure that there are no obstacles between the remote control and the infrared sensor window on the unit.
- Remote operation may become unreliable if strong sunlight or fluorescent light is shining on the infrared sensor window of the unit.
- Remote controls of different devices can interfere with each other. Avoid using a remote control from another device which is located close to the unit.
- Replace the batteries when you notice a fall-off in the operating range of the remote control.
- The maximum operable ranges from the unit are as follows.
 - Line of sight: approx. 23 feet (7 m)
 - Either side of the center: approx. 16 feet (5 m) within 30°
 - **Above:** approx. 16 feet (5 m) within 15°
 - Below: approx. 10 feet (3 m) within 30°

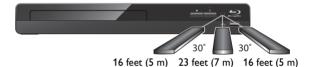

3.4. Guide to On-Screen Display

■ Home Menu

When you Turn On the unit, Home Menu will appear automatically. Otherwise, press [HOME].

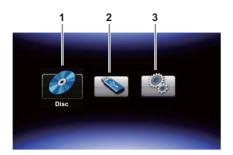

1. "Disc": Initiates playback of inserted disc, displays a list of Tracks / Files or the Media Filter Menu

2. "USB Memory Stick": Displays a list of Tracks / Files on the connected USB Memory Stick or the Media Filter Menu

3. "Settings": To access the Setup Menu

■ Setup Menu



- 1. Category
- 2. Menus / Options: Displays options for the highlighted item on the left whenever available
- Play Menu

During playback, press [MODE] to display the Play Menu.


e.g.) Blu-ray Disc™



4. CONNECTIONS

4.1. Connection to a TV

■ HDMI Connection (Supports up to 1080i^(*1), 1080p^(*2), 1080p/24^(*3) resolution.)

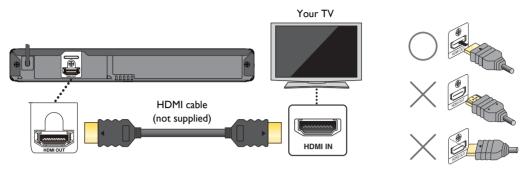

No analog audio connection required.

(*1) 1080i: Outputs video data with a frame rate of 30 frames per second.

(*2) 1080p: Outputs video data with a frame rate of 60 frames per second.

(*3) 1080p/24: Outputs video data with a frame rate of 24 frames per second.

- Do not tilt the connector when inserting it into the HDMI jack, and make sure the shapes of the jack and the connector are matched.
- When connected to an HDCP incompatible display device, the picture will not be displayed properly.
- Use an HDMI cable with the HDMI logo (a certified HDMI cable) for this connection. High Speed HDMI cable (also known as HDMI category 2 cable) is recommended for better compatibility.


■ Note

- If the TV receives no Audio / Video signal after properly connecting the unit and the TV with an HDMI cable, it may be the TV. Please refer to the TV's user's manual.
- If the TV receives no Audio signal after properly connecting the unit and the TV with an HDMI cable, make sure the TV input is not an HDMI-DVI Input terminal.

4.2. Connection to an Audio System

- When you change the connections, all devices should be Turned Off.
- When connecting the unit to an external audio system, refer to the User Manual for Setup / Configuration help.

■ HDMI Audio Connection

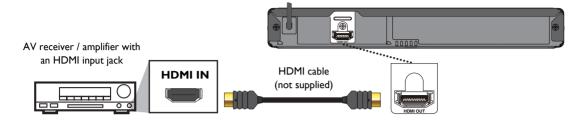

4.3. HDMI Audio Output

	"Audio Output" setting →	"Bitstream"		"LPCM"			
	"BD Audio Mode" setting →	"HD Audio Output"	HD Audio Output" "Mix Audio Output"		"Mix Audio Output"		
Media ▼	Audio Source	Which audio format can be output depends on the compatibility of the connected device					
	Dolby Digital	Dolby Digital	Digital or Multi LPCM Multi LPCM		LPCM		
	Dolby Digital Plus	Dolby Digital Plus or Dolby Digital or Multi LPCM ^{*1}	Dolby Digital or Multi LPCM* ²	Multi LPCM*1	Multi LPCM*2		
BD-video	Dolby TrueHD	Dolby TrueHD or Dolby Digital or Multi LPCM ^{*3}	Dolby Digital or Multi LPCM ^{*4}	Multi LPCM*3	Multi LPCM*4		
	DTS [®]	DTS [®] or Dow	nmix 2ch PCM	Downmix	2ch PCM		
	DTS-HD [®]	DTS-HD [®] or DTS [®] or Downmix 2ch PCM ^{*5}	DTS [®] or Downmix 2ch PCM ^{*5}	Downmix	2ch PCM ^{*5}		
	LPCM		Multi	LPCM			
	Dolby Digital	Dolby Digital	or Multi LPCM	Multi LPCM			
DVD-video	DTS [®]	DTS [®] or Downmix 2ch PCM		PCM Downmix 2ch PCM			
DVD-video	MPEG	MPEG or Multi LPCM		Multi LPCM			
	LPCM	Multi l		i LPCM			
Audio CD	LPCM	2ch LPCM					
DTS-CD	DTS [®]	DTS [®] or Dow	nmix 2ch PCM	Downmix	2ch PCM		
AVCHD	Dolby Digital	Dolby Digital	Dolby Digital or Multi LPCM Multi LPCM				
*1\ = #	LPCM		Multi LPCM				

^{*1)} Fully decoded.

■ Note

- If the connected device is not compatible with the HDMI BITSTREAM, audio will be output as multi LPCM or 2-channel down-mixed LPCM depending on the capability of the connected device even if you select "Bitstream" in "Audio Output" setting.
- When playing back a BD-video which only contains the primary audio, the audio output will be the same case as "HD Audio Output" even if the "BD Audio Mode" is set to "Mix Audio Output".
- HD Audio will not be output when "BD Audio Mode" is set to "Mix Audio Output" and the Button Sound feature in the content is enabled. (Button Sound setting may be found in Pop Menu.)

^{*2)} Only the independent substream is decoded.

^{*3)} Dolby TrueHD stream is decoded.

^{*4)} Only the Dolby Digital substream is decoded.

^{*5)} Only the core substream is decoded.

5. BEFORE YOU START

5.1. Finding a Viewing Video Source Input on Your TV

After you have completed all of the connections to your TV, review the steps below.

- 1. Press [() (POWER-ON)] to Turn On the unit.
- 2. Turn On your TV.
- 3. Please locate the Source / Input / AUX / Video button on TV's remote control. The button may vary on the TV brand and model. Once you have located the button, press until you see "Please Wait..." or "Welcome!" on the Screen.



This is the correct viewing of the video Source Input.

- · If the TV is connected by an HDMI cable, it may take a few moments for the opening picture to appear.
- If a certain amount of time has passed since you Turned On the unit, welcome screen only appears the first time you Turn On the unit.

5.2. Initial Setup

Please follow the instructions below to complete the initial setup.

- 1. While welcome screen is displayed, use [▲ / ▼] to select "Next", then press [OK].
- 2. Language setup screen will appear. Use [▲ / ▼] to select your language, then press [OK].



3. "Quick Start Mode" screen will appear. Use [▲ / ▼] to select the desired mode, then press [OK].

■ How to Reset the OSD Language

You can reset the OSD language if you selected the wrong language.

- 1. Press [HOME] to display the Home Menu.
- 2. Use [◀ / ▶] to select " , then press [OK].
 - This item is "Settings" (English) / "Configuaraciones" (Spanish) / "Paramètres" (French).
 - From here on, please select one of the following items you can find on screen:
- 3. Use [▲ / ▼] to select "Playback" (English) / "Reproducción" (Spanish) / "Lecture" (French), then press [OK].
- 4. Use [▲ / ▼] to select "Language" (English) / "Idioma" (Spanish) / "Langue" (French), then press [OK].
- 5. Use [▲ / ▼] to select your desired language, then press [OK].
- 6. If the items that were set are displayed in your desired language, then press [HOME] to exit.

6. INFORMATION ON PLAYBACK

6.1. Information on Playback

■ Playable Discs and Files

Playable discs	Logos
Blu-ray Disc™	
- BD-video	
- BD-RE* (ver. 2.1)	6)
(Recorded in BDMV format)	Blu-rayDisc
- BD-R* (ver. 1.1 / 1.2 / 1.3) (Recorded in BDMV format)	
(Unfinalized disc may not be played back.)	
(Offinialized disc may not be played back.)	
DVD-video	VIDEO
DVD-RW	מעס
(finalized video mode discs only)	RW °
DVD-R	DVD
(finalized video mode discs only)	R
CD-DA (audio CD)	COMPACT DIGITAL AUDIO
CD-RW	COMPACT COMPACT
	ReWritable ReWritable
CD-R	COMPACT COMPAC
	1/1-1-
KODAK Picture CD	Kodak Picture CD COMPATIBLE
	COMPANDE
DTS-CD	-

(*) Due to the intentional progression of the Blu-ray Disc™ format by its standard setting authority, the company cannot guarantee or warrant the playability of future extensions of the Blu-ray Disc™ format with this product.

Playable files	Media		
AVCHD	DVD-RW/-R		
Averib	SD Memory Card using USB card reader / USB hub (not supplied)		
	BD-RE/-R		
IPEG	DVD-RW/-R		
). 23	CD-RW/-R		
	USB Memory Stick		
Readable device	Playable files / data		
USB Memory Stick	JPEG, picture-in-picture commentary, Subtitles or other extras for some BD-ROM.		

Note

• This unit may not be able to play back discs recorded on PC's or other recorders.

■ Recommended Specifications

AVCHD

This unit cannot play back stand-alone AVCHD files (*.m2ts, *.mts or *.m2t) written to a DVD or copied to an SD Memory Card. The DVD or SD Memory Card containing AVCHD files must have a proper file and folder structure meeting AVCHD format specifications. Please use AVCHD compliant device / software to burn or copy AVCHD files to DVD or SD Memory Card. (Please refer to user manuals of your device / software for more information.)

IPEG

Resolution

• Upper limit: $4,096 \times 4,096$ dots (sub sampling is 4:4:4)

 $5,120 \times 5,120$ dots (sub sampling is up to 4:2:2 or 4:2:0)

Lower limit: 32 x 32 dots

Maximum file size of a picture: 12MB

■ Folder / File Number Limitations

Blu-ray Disc™, DVD and USB Memory Stick

· 999 folders (groups) and 9,999 files

CD

255 folders (groups) and 999 Tracks / Files

Caution / Note for USB Memory Stick

Caution

- Do not try to open or modify the USB Memory Stick.
- Do not touch the terminal surface with your fingers or any metals.

⊜ Note

- This unit supports USB Memory Stick with FAT16 / FAT32 file system.
- This unit does not support NTFS file system.
- This unit may not read USB Memory Sticks formatted on a computer. If that is the case, please reformat the USB Memory Sticks on this unit and try again. Please not that all files stored on the USB Memory Stick will be erased upon format.
- Please keep the USB Memory Sticks in their cases when you are not using them.
- · Some USB Memory Sticks may not work with this unit.
- This unit can read SD Memory Cards using a USB card reader (not supplied).
 - Readable cards: SD Memory Card (8 MB 2 GB)

miniSD Memory Card (16 MB - 2 GB) microSD Memory Card (256 MB - 2 GB) SDHC Memory Card (4 GB - 32 GB) miniSDHC Memory Card (4 GB - 8 GB) microSDHC Memory Card (4 GB - 16 GB)

- Readable files: AVCHD / IPEG
- · Depending on a USB card reader or USB hub, connected card or device may not be recognized.

■ Unplayable Media and Files

The following discs will not be played back on this unit.

- CD-ROM
- DVD-RAM
- DVD-audio
- HD DVD
- SDXC Memory Card
- unfinalized disc
- BD-RE (ver. 2.1) (Recorded in BDAV format)
- BDXL™

- CD-I (compact disc-interactive)
- VSD (video single disc)
- video CD
- SVCD
- microSDXC Memory Card
- BD-RE (ver. 1.0)
- BD-R (ver. 1.1 / 1.2 / 1.3) (Recorded in BDAV format)
- Blu-ray Disc™ / DVD / CD / USB Memory Stick / SD Memory Card containing DivX[®] files
- Blu-ray Disc[™] / USB Memory Stick that contains AVCHD files
- Blu-ray Disc[™] / DVD hybrid disc (played back as a BD-video only)
- DVD-RW/-R recorded in non compatible recording format
- · Super Audio CD Only the sound on the CD layer can be heard. The sound on the high-density Super Audio CD layer cannot be heard.
- · Playability of dual discs is not guaranteed.
- This unit cannot play back the disc contents protected by Windows Media™ Digital Rights Management (DRM).

■ Region Codes

This unit has been designed to play back BD-video with region "A" and DVD-video with region "1" or "ALL". You cannot play back BD-video or DVD-video that is labeled for other regions. Look for the symbols on your BD-video or DVD-video. If these region symbols do not appear on your BD-video or DVD-video, you cannot play back the disc on this unit. The letter or number inside the globe refers to region of the world. BD-video or DVD-video discs labeled for a specific region can only be played back on players with the same region code.




DVD-video



■ Hint for Disc Playback

The contents of a disc are generally divided into sections or folders (group of titles / files) as shown below.

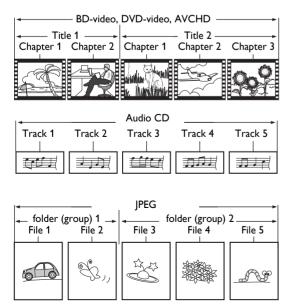

■ Description for Icons

[]: group (folder) icon

[Music 1: music file icon

[hoto file icon

- "Folders" refers to the group of files.
- "Track" refers to the contents recorded on the audio CD.
- "Files" refers to the contents on a disc which are recorded in AVCHD, JPEG (including KODAK Picture CD) file format.

♠ Note

• Unrecognizable characters will be replaced with asterisks.

6.2. Guide to File List

■ Picture File List



- 1. Current File number / Total number of Files
- 2. Playback status symbol

- 3. Media type
- 4. Group (folder) / File list (thumbnails)
- How to Navigate through the File List
- For picture file list, use [▲ / ▼ / ◀ / ▶] to move the highlight up, down, left and right. Press [RETURN] to go back to the previous hierarchy.
- To access the files in a Group (folder), select the desired Group (folder), then press **[OK]**.
- Press [RED] or [GREEN] to change the page list up or down.
- Press [YELLOW] to go back to the file type ("Photo" / "AVCHD") selection screen.
- Press [HOME] to Exit.

6.3. How to Insert a Disc

- 1. Press [(OPEN/CLOSE)] to Open the disc tray.
- 2. Place the Disc on the disc tray with its label side facing up.
- 3. Press [(OPEN/CLOSE)] to Close the disc tray.
 - · It may take a while to load the disc.



7. **BASIC PLAYBACK**

7.1. Playing Back a Disc











- 1. Insert a disc (refer to "How to Insert a Disc" on page 18).
 - For Blu-ray Disc™ / DVD / audio CD or a disc containing only one type of file, playback will start automatically. If not, press [► (PLAY)].
 - Some discs may show a Title or a Disc Menu. In this case, refer to "Using the Title / Disc / Pop Menu" on page 21.
- 2. Select the type of the file you want to play back, then press **[OK]**.



- a. For "Photo", thumbnail screen will appear.
 - Refer to "Picture File List" on page 18 and "How to Navigate through the File List" on page 18.
- b. For "AVCHD", playback will start automatically.

To Skip to the next Title / Chapter / Track / File: Press [▶▶| (SKIP)]. To Skip to the previous Title / Chapter / Track / File: Press [I◄◄ (SKIP)]. To Pause playback: Press [II (PAUSE)]. To Return to Normal playback: Press [(PLAY)]. To Stop playback: Press [(STOP)].

Playback will be in Resume-On-Stop mode. To clear the resume information, press [(STOP)] again.

■ Resume-On-Stop Mode

Blu-ray Disc™ / DVD / AVCHD

When you press [► (PLAY)] next time, the playback will start from the point where it has been stopped.

Audio CD

Playback will start from the point where it is stopped next time you press [▶ (PLAY)]. If you press [OK] instead of [> (PLAY)], playback will start from the beginning of the Track / File instead of resuming from the stop point.

JPEG / KODAK Picture CD

Playback will start from the beginning of the current file next time you press [► (PLAY)] or [OK].

Note

- Playback will also Stop and the Home Menu will appear when you press [HOME].
- For BD-lava application, the Resume-On-Stop may not be available.
- If you press [OK] instead of [► (PLAY)], playback can be started from the beginning of the disc even if it was in the Resume-On-Stop mode.
- Resume-On-Stop mode remains in effect even after Power is Turned Off, but will be cancelled once the disc is ejected.
- With regard to the multi-border BD-RE/-R, additionally recorded sections cannot be recognized.
- With regard to the multi-border DVD-RW/-R, additionally recorded sections may not be recognized.

■ Note for JPEG / KODAK Picture CD Playback

- Every press of 「◀ / ▶] will turn the image by 90 degrees when an image is displayed.
- During playback, press **[TOP MENU]** to display thumbnail screen.
- This unit conforms to ver. 7.0 of KODAK Picture CD. For details of KODAK Picture CD, contact the shop that provided the KODAK Picture CD.
- Some unplayable folders or files may be listed due to the recording status.
- · High-resolution JPEG files take longer to be displayed.
- · Progressive |PEG files (|PEG files saved in progressive format) cannot be played back on this unit.

7.2. Playing Back Contents from a USB Memory Stick



You can play back JPEG files stored on a USB Memory Stick. With the USB Memory Stick, you can also enjoy the following functions

Special additional contents for BD-ROM.
 (For more information about the special additional contents, refer to the instruction book that came with the disc.)



- 1. Connect a USB Memory Stick.
- 2. Press [HOME].
- 3. Use [◀ / ▶] to select "USB Memory Stick", then press [OK].
- 4. Follow step 2 in "Playing Back a Disc" on page 19.

Caution

- Do not disconnect the USB Memory Stick or switch the unit to Standby mode while a content on the USB Memory Stick is being accessed. It may result in malfunction or loss of the stick's data.
- If you connect a USB Memory Stick or SD Memory Card via a USB card reader or USB hub, BD-ROM data will be
 written onto the first connected card or device. Connecting a USB Memory Stick directly to this unit is recommended.
- Occasionally, SD Memory Cards / Micro SD Memory Cards will not be recognized when using certain Adapters. In such cases, try a different USB Adapter.

■ Note

- When connecting more than two USB Memory Sticks to a USB Hub, this unit may fail to recognize them. In such cases, disconnect the USB Hub from the unit then reconnect it, or use less USB Memory Sticks at a time.
- The resume information will be cleared when;
 - [(STOP)] is pressed while in the Resume-On-Stop mode.
 - the USB Memory Stick is disconnected.
 - the unit is switched to Standby mode.
- Do not delete the folders or files on the USB Memory Stick with your computer. This unit may not read USB Memory Sticks formatted on a computer.
- If a folder or file name includes one of the following unrecognizable characters, the folder or file name may not be displayed correctly.
 - Unrecognizable characters: [.," = + [];/ :| Y
- This unit can read JPEG files and AVCHD on an SD Memory Card by using USB card reader / USB hub (not supplied).

7.3. Using the Title / Disc / Pop Menu



Some BD-videos, DVD-videos or AVCHD files may contain a Title Menu which describes the contents of the disc, or a Disc Menu which guides you through the available functions on the disc.

With such discs, a Title Menu or a Disc Menu may appear automatically when you insert the disc. Otherwise, press **[TOP MENU]** or **[POP MENU/MENU]** to call up the menu. Refer to the disc's manual on how to navigate through the menu.

⊜ Note

- Menus vary among discs. Refer to the information accompanying the disc for details.
- [TOP MENU] or [POP MENU/MENU] may not work with some discs.

8. SPECIAL PLAYBACK

Fast Forward / Fast Reverse









- 1. During playback, press [>> (FORWARD)] repeatedly for Fast Forward. During playback, press [◄◄ (REVERSE)] repeatedly for Fast Reverse.
- 2. Press [► (PLAY)] to return to Normal playback.

■ Note

- For Blu-ray Disc[™], DVD and AVCHD, speed changes at 5 different levels.
- For audio CD, speed changes at 3 different levels.
- For audio CD. Fast Forward / Fast Reverse search between different files are not available.

8.2. **Slow Forward Playback**







- 1. During playback, press [II (PAUSE)]. Then press [▶▶ (FORWARD)]. Every time you press [>> (FORWARD)], the playback speed changes at 3 different levels.
- 2. Press [► (PLAY)] to return to Normal playback.

♠ Note

- Slow Reverse is not available.
- Set "Still Mode" to "Field" in "Video Out" menu if pictures in the Slow Forward playback mode are blurred.

Step by Step Playback 8.3.







- In pause mode, press [►► (SKIP)] repeatedly. Every time you press [>>| (SKIP)], playback will advance one step at a time.
- 2. Press [► (PLAY)] or [II (PAUSE)] to return to Normal playback.

Note

- Step by step reverse is not available.
- Set "Still Mode" to "Field" in "Video Out" menu if pictures in the step by step playback mode are blurred.

8.4. Repeat Playback

Available repeat functions vary depending on the disc.

- 1. During playback, press [REPEAT].
- 2. Use **[**▲ / **▼**] to select the desired repeat mode.
 - You can also change the repeat mode by pressing [REPEAT] repeatedly.

REPEAT MODE	AVAILABLE MEDIA
Chapter Repeat	S RD AVCUD
The current Chapter will be played back repeatedly.	AVCHD
Title Repeat	S RD AVCUD
The current Title will be played back repeatedly.	AVCHD AVCHD
Track Repeat	O CD JPEG
The current Track or File will be played back repeatedly.	3. 23
All Repeat	
All Tracks in the media will be played back repeatedly.	
Group Repeat	ines
The current Group (folder) will be played back repeatedly.	JPEG
Random Repeat (Audio CD)	
Repeats the random playback.	
Random Repeat (JPEG)	JPEG
Repeats the random playback in a folder.	31-20

3. Press [RETURN] to Exit.

⊜ Note

- The repeat setting will be cancelled when you stop playback.
- When the repeat setting is set for an JPEG folder (file), the repeat setting will be cancelled if you select another JPEG folder (file) to play back.
- You can also use the Repeat function from the Play Menu. Play Menu can be called up by pressing [MODE].

8.5. Slide Show

JPEG

- 1. Follow steps 1 and 2 in "Playing Back a Disc" on page 19.
- 2. Open the folder which contains the desired JPEG files.
- 3. Use [▲/▼/ ◀/ ▶] to select a desired file to be played back, then press [▶ (PLAY)] or [OK].
 - · An image will be played back from the selected file and go to the next one in turn every 10 seconds.
- Press [■ (STOP)] to Stop playback.

To return to the first item: Press [TOP MENU]

To return to the file played last: Press [POP MENU/MENU]


Note

Large-size IPEG files take a few moments to be displayed.

8.6. PiP (BONUSVIEW™) Setting



Some BD-videos have the PiP function which enables you to display the Secondary Video in the Primary Video.

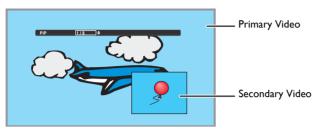

- 1. During playback, press [MODE] to display the Play Menu.
- 2. Use [▲ / ▼] to select "PiP" then press [OK].
 - PiP information will appear.
- 3. Use [▲ / ▼] to select the Secondary Video you want to show.
 - The Secondary Video will be displayed with the Secondary Audio.
 - Use [◀ / ▶] to switch between current setting and "Off".
- 4. Press [RETURN] to Exit.
 - · How to select the Secondary Audio output, refer to "Switching Audio Soundtrack" on page 28.

Note

 Not that the secondary video will be displayed at any time during playback. Depending on the scene, the secondary video may not be available.

8.7. Title / Chapter Search



■ Using [| (SKIP)] / [>>| (SKIP)]

1. During playback, press [>>| (SKIP)] to Skip the current Title or Chapter and move to the next.

The Title or Chapter will move forward one at a time.

• If there is no Chapter in one Title, the current Title may be Skipped.

To go back to the beginning of the current Title or Chapter, press [I (SKIP)].

Press [I44 (SKIP)] repeatedly to go to the previous Title or Chapter. The Title or Chapter may move backward one at a time.

■ Using [MODE]

- 1. During playback, press [MODE] to display the Play Menu.
- 2. Use [▲ / ▼] to select "Search", then press [OK].
- 3. Use [▲ / ▼] to select " TT " or "CHP", then press [OK].
 - e.g.) Blu-ray Disc™



4. Use [▲ / ▼] to select the Title / Chapter number, then press [OK].

Playback will start from the beginning of the Title / Chapter.

■ Using [SEARCH]

- 1. During playback, press [SEARCH].
- 2. Press [SEARCH] or use [▲ / ▼] to select " TT " or "CHP", then press [OK].
- Use [▲ / ▼] to select the Title / Chapter number, then press [OK].
 Playback will start from the beginning of the Title / Chapter.
- Using [the NUMBER buttons] (Direct Search / Direct Title Search)

Chapter Search

During playback of a Title, enter the Chapter number you want to search using [the **NUMBER buttons**]. Playback of the Chapter will start in a few seconds.

⊜ Note

As for the BD-video, how it performs will be strongly determined by the disc, and may not perform as described.

Title Search

For DVD, enter the Title number you want to start playback using [the **NUMBER buttons**] in the Resume-On-Stop mode.

Playback of the Title will start in a few seconds.

8.8. Track / File Search



■ Using [|**44** (SKIP)] / [▶▶| (SKIP)]

1. During playback, press [▶►] (SKIP)] to Skip the current Track or File and move to the next.

The Track / File will move forward one at a time. To go back to the beginning of the current Track / File, press [I◄◄ (SKIP)].

Press it repeatedly to go to the previous Track / File. The Track / File will move backward one at a time.

■ Using [MODE]

- 1. During playback, press [MODE] to display the Play Menu.
- 2. Use **[**▲ / **▼**] to select "Search", then press **[OK]**.
 - For JPEG files, skip to step 4.
- 3. Use [▲ / ▼] to select " TR ", then press [OK].
- Use [▲ / ▼] to select the Track number, then press [OK].
 Playback will start from the beginning of the Track.

■ Using [SEARCH]

- 1. During playback, press [SEARCH].
 - For IPEG files, skip to step 3.
- 2. Press [SEARCH] or use [▲ / ▼] to select " TR ", then press [OK].
- Use [▲ / ▼] to select the Track number, then press [OK].
 Playback will start from the beginning of the Track.

8.9. Time Search



■ Using [MODE]

- 1. During playback, press [MODE] to display the Play Menu.
- 2. Use [▲ / ▼] to select "Search", then press [OK].
- 3. Use [▲ / ▼] to select " (b)", then press [OK].
 - e.g.) Blu-ray Disc™



4. Use [▲ / ▼] or [the NUMBER buttons] to enter the time count you want to jump to, then press [OK].

e.g.) Entering 1 hour 45 minutes and 15 seconds.



Playback will start from the desired time entered.

■ Using [SEARCH]

- 1. During playback, press [SEARCH].
- 2. Press [SEARCH] or use [▲ / ▼] to select " ⊕ ", then press [OK].
- Use [▲ / ▼] or [the NUMBER buttons] to enter the time count you want to jump to, then press [OK].
 Playback will start from the desired time entered.

8.10. Switching Subtitles

Some video materials may have subtitles in one or more languages. For commercially available discs, the supported languages can be found on the disc case. Follow the steps below to switch the Subtitle language during playback.



- 1. During playback, press [SUBTITLE].
- 2. Use [▲ / ▼] to select "Primary", "Secondary" or "Style", then press [OK].
 - You can also change the setting by pressing [SUBTITLE] repeatedly when the highlight is on "Primary".

"Primary": Sets the Subtitle for the Primary Video.

"Secondary": Sets the Subtitle for the Secondary Video.

"Style": Sets Style of the Subtitle.

3. Use [▲ / ▼] to select your desired Subtitle or Style.



- Use [◀ / ▶] to switch between current Subtitle setting and "Off".
- 4. Press [RETURN] repeatedly to Exit.



- 1. During playback, press [SUBTITLE].
- 2. Use [▲ / ▼] to select your desired Subtitle.
 - You can also change the setting by pressing [SUBTITLE] repeatedly.

Subtitle 1 ENG / 32 →

- Use [◄ / ▶] to switch between current Subtitle setting and "Off".
- 3. Press [RETURN] to Exit.

⊜ Note

- Some discs will only allow you to change the subtitles from the Disc Menu or Pop Menu. Press **[TOP MENU]** or **[POP MENU/MENU]** to display the Disc Menu or Pop Menu.
- If the disc has no Subtitle language or Subtitle Style, "Not Available" will be displayed on the TV screen.
- During playback of the Secondary Video, the Primary Subtitle setting is not available except when there is no Subtitle for the Secondary Video.
- You can also change the Subtitle setting from the Play Menu. Play Menu can be called up by pressing [MODE].

8.11. Switching Audio Soundtrack

When playing back video material recorded with two or more soundtracks (these are often in different audio languages or audio formats), you can switch them during playback. For Blu-ray Disc™, available audio varies depending on "BD Audio Mode" setting. Refer to page 31.



- 1. During playback, press [AUDIO].
- 2. Use [▲ / ▼] to select "Primary" or "Secondary", then press [OK].
 - You can also change the setting by pressing [AUDIO] repeatedly when the highlight is on "Primary".
 - "Primary": Sets the audio for the Primary Video.
 - "Secondary": Sets the audio for the Secondary Video.
- 3. Use [▲ / ▼] to select your desired audio stream channel.



- For "Secondary", use [◄ / ▶] to switch between current audio setting and "Off".
- 4. Press [RETURN] repeatedly to Exit.



- 1. During playback, press [AUDIO].
- 2. Use [▲ / ▼] to select your desired audio stream channel.
 - You can also change the setting by pressing [AUDIO] repeatedly.



- For audio CD, you can select following options.
- "Stereo": Both right and left channels are active (stereo).
- "L-ch": Only left channel is active.

 "R-ch": Only right channel is active.
- 3. Press [RETURN] to Exit.

Note

- The Secondary Audio will not be output when the Secondary Video is not displayed or when "BD Audio Mode" is set to "HD Audio Output". (For some Blu-ray discs, Secondary Audio will be output even when Secondary Video is Off.)
- The sound mode cannot be changed during playback of discs not recorded in multiple audio mode.
- Some discs allow changing the audio language setting from Disc Menu. (Operation varies depending on the discs. Refer
 to the manual accompanying the disc.)
- [AUDIO] may not work on some discs with multiple audio streams or channels (e.g. DVDs that allow changing audio setting on the disc menu).
- If the disc has no audio language, "Not Available" will be displayed on the TV screen.
- For DTS-CD (5.1 music disc), selecting audio streams or channels is not available.
- You can also change the Audio setting from the Play Menu. Play Menu can be called up by pressing [MODE].

8.12. Switching Camera Angles



Some BD-videos and DVD-videos contain scenes which have been shot simultaneously from various angles. You can change the Camera Angle when appears on the TV screen.

- 1. During playback, press [ANGLE].
- 2. Use [▲ / ▼] to select your desired angle.
 - You can also change the setting by pressing [ANGLE] repeatedly.
 - The selected Angle will be displayed on the display bar at the top of the TV screen.
- 3. Press [RETURN] to Exit.

⊜ Note

- If "Angle Icon" setting is set to "Off", will not appear on the TV screen.
- You can also change the Camera Angles from the Play Menu. Play Menu can be called up by pressing [MODE].

8.13. Noise Reduction



Reduces the noise of the playback picture.

- 1. During playback, press [MODE] to display the Play Menu.
- 2. Use [▲ / ▼] to select "Noise Reduction", then press [OK].
- 3. Use [▲ / ▼] to select your desired setting.
 - e.g.) Blu-ray Disc™



"On": Activates noise reduction.

"Off": Deactivates noise reduction.

4. Press [RETURN] to Exit.

⊜ Note

• The setting will remain the same even if the unit is switched to Standby mode.

8.14. CLEAR+



CLEAR+ enhances the contrast of the picture and makes edges crisp. It is effective especially for DVD's.

- 1. During playback, press [MODE] to display the Play Menu.
- 2. Use [▲ / ▼] to select "CLEAR+", then press [OK].
- 3. Use [▲ / ▼] to select your desired setting.
 - e.g.) Blu-ray Disc™



- "On": Gives low-definition videos high-definition like picture quality.
- "Off": Shows the original picture as recorded.
- 4. Press [RETURN] to Exit.

⊜ Note

- · This operation is prohibited during Fast Forward, Fast Reverse, Slow Forward playback and pause mode.
- Pictures may appear whiter depending on the material and the connected TV. In this case, turn "CLEAR+" Off.
- "CLEAR+" is not effective under the following conditions.
 - When the material is in 1080p24 which is commonly used in Blu-ray discs.

9. LIST OF SETTINGS

In "Settings", you can customize various kinds of settings as you prefer. Refer to the following instructions to navigate through the Setup Menu.

- 1. Press [HOME] to access the Home Menu.
- 2. Use [◀ / ▶] to select "Settings", then press [OK].
- 3. Use [▲ / ▼] to select the desired Category, then press [OK].
- 4. Use [▲ / ▼] to move up and down the list to select Menus / Options.
- 5. To make a selection or to access options of an item, select the desired item, then press [OK].
 - To go back to the previous screen, press [RETURN].
- 6. Press [HOME] to Exit.

Refer to the following table for the types of settings you can customize.

The item highlighted in gray is the default setting.

Category		Menus / Options
Video Out	TV Aspect	4:3 Letter Box
		4:3 Pan & Scan
		16:9 Wide
		16:9 Squeeze
	Progressive Mode	Auto
		Video
	Still Mode	Auto
		Field
		Frame
Audio Out	DRC	Auto
		On
		Off
	BD Audio Mode	Mix Audio Output
		HD Audio Output
HDMI	fun-Link (HDMI CEC)	On
		Off
	Video Resolution	Auto
		480p
	Deep Color	Auto
		Off
	Audio Output	Bitstream
		LPCM

Category		Menus / Options			
Playback	Language	Auto			
.,		English			
		Español			
		Français			
	Audio	Original			
	7 100 100	Bulgarian	Italian		
		Chinese	Japanese		
		Czech	Korean		
		Danish	Norwegian		
		Dutch	Polish		
		English			
		Finnish	Portuguese Romanian		
		French	Russian		
		German	Slovak		
		Greek	Spanish		
		Hungarian	Swedish		
		Icelandic	Turkish		
		Irish	Other		
	Subtitle	Off	li e		
		Bulgarian	Italian		
		Chinese	Japanese		
		Czech	Korean		
		Danish	Norwegian		
		Dutch	Polish		
		English	Portuguese		
		Finnish	Romanian		
		French	Russian		
		German	Slovak		
		Greek	Spanish		
		Hungarian	Swedish		
		Icelandic	Turkish		
		Irish	Other		
	Disc Menu	Bulgarian	Italian		
		Chinese	Japanese		
		Czech	Korean		
		Danish	Norwegian		
		Dutch	Polish		
		English	Portuguese		
		Finnish	Romanian		
		French	Russian		
		German	Slovak		
		Greek	Spanish		
		Hungarian	Swedish		
		Icelandic	Turkish		
		Irish	Other		
	BD Rating Level	Off			
	_	Age Setting			
	DVD Rating Level	Off			
		8 [Adult]	4 [PG-13]		
		7 [NC-17]	3 [PG]		
		6 [R]	2 [G]		
		5 [PGR]	1 [Kid Safe]		
	Password Change] L3		
	Angle Icon	On			
		Off			
	1				

Category	Menus / Options			
Others	Software Update	Disc		
		USB Memory Stick		
	Quick Start Mode*	On		
		Off		
	Product Info			
	Initialize	Reset Settings		
		Format USB Memory Stick		
		(Unit) Erase Saved BD-ROM Data		
		(USB Memory Stick) Erase Saved BD-ROM Data		
	OSS			

^{*} When "Quick Start Mode" is set to "On", power consumption during Standby mode will increase.

10. SETUPS

10.1. fun-Link (HDMI CEC)



fun-Link (HDMI CEC) allows integrated system control over HDMI and is part of the HDMI standard. This function may not work properly depending on the device connected to the unit. When "fun-Link (HDMI CEC)" setting is set to "On" the functions listed below will be available.

■ One Touch Play

When the buttons below on the remote control are pressed then operations are performed on this unit, the TV will automatically be Turned On and switched to the appropriate video Source Input.

Buttons for one touch play:

- [▶ (PLAY)], [|◀◀ (SKIP)], [▶▶| (SKIP)], [the NUMBER buttons], [HOME]
- [TOP MENU], or [POP MENU/MENU] (when a disc is inserted in the unit)

■ One Touch Standby

When you press and hold [() (POWER-ON)] for 2 seconds, it turns Off the TV first and then Turns Off the power on this unit

When the connected fun-Link (HDMI CEC) compatible display device is Turned Off first, then it Turns Off the power to this unit.

■ System Information

Get & Set Menu Language

The unit recognizes the OSD language set on the TV and automatically sets the same language as the Player Menu Language (OSD menu language) for this unit. "Language" under "Playback" on page 32 for available languages.

 Feature is available only when "Auto" is selected in the Setup Menu "Language" section in "Settings" while connected via an HDMI cable.

10.2. HDMI Video Resolution

FIOTIL - Settings - FIDTH - Video Resolution	HOME	→	"Settings"	→	"HDMI"	→	"Video Resolution"
--	------	----------	------------	----------	--------	----------	--------------------

Set the resolution of the video signal being output from the HDMI OUT jack.

You can select the desired "Video Resolution" among the settings listed below: "Auto", "480p".

Actual Output Resolution:

Setting in the			Source		
"Video Resolution"	480i/60	720p/60	1080i/60	720p/24	1080p/24
Auto	The highest resolution supported by your display device will automatically be in effect.				
480p		_	480 _P /60		

• For AVCHD, outputting the video in 24 frames per second (1080p/24) is not available.

♠ Note

- The selected resolution must also be supported by your display device.
- If your TV and the unit are connected by a DVI cable and if "Auto" is selected, "480p" will be automatically in effect.
- Refer also to your TV's manual.
- When connected to an HDCP incompatible display device, the picture will not be displayed properly.
- The audio signals from the HDMI OUT jack (including the sampling frequency, the number of channels and bit length) may be limited by the connected device.
- Among the display devices that support HDMI, some do not support audio output (for example, projectors).
 While connected to a device such as a projector, audio will not be output from the HDMI OUT jack.
- When this unit's HDMI OUT jack is connected to a DVI-D compatible display device(s) (HDCP compatible) with an HDMI-DVI converter cable, the signals are output in digital RGB.
- HDMI video resolution does not work during the playback of a BD-video.

Copyright protection system

To play back the digital video images of a BD-video or DVD-video via an HDMI connection, it is necessary that both the player and the display device (or an AV receiver / amplifier) support a copyright protection system called HDCP (high-bandwidth digital content protection system). HDCP is copy protection technology that comprises data encryption and authentication of the connected AV device. This unit supports HDCP. Please read the operating instructions of your display device (or an AV receiver / amplifier) for more information.

10.3. Parental

Some BD-videos or DVD-videos feature parental lock levels. Playback will stop if the ratings exceed the levels you set, it will require you to enter a password before the disc will play back. This feature prevents your children from viewing inappropriate material.

1. Use [the NUMBER buttons] to enter your 4-digit password.

For the first time use:

Use [the NUMBER buttons] to enter any 4-digit number (except for 4737). That number will be used as the password. Record your password, in case you forget it.

- If you forget the password, enter [4], [7], [3], [7]. The password will be cleared and rating level will be set to "Off".
- When you input the password, select "Clear" to clear the number, then re-enter the password.

■ BD Rating Level



- 1. Use [◀ / ▶] to select "Settings" in the Home Menu, then press [OK].
- 2. Use [▲ / ▼] to select "Playback", then press [OK].
- 3. Use [▲ / ▼] to select "BD Rating Level", then press [OK].
- 4. Use [the NUMBER buttons] to enter your 4-digit password.
- 5. Use [▲ / ▼] to select your desired option, then press [OK].

"Off": To release the limitation.
"Age Setting": To set the age limitation.

• After selecting "Age Setting", use [the NUMBER buttons] to enter the age.

(e.g., For age 6, enter [6] + [OK]. For age 15, enter [1] + [5] + [OK].)

6. Press [HOME] to Exit.


■ DVD Rating Level

HOME	→	"Settings"	→	"Playback"	→	"DVD Rating Level"
		0000060		· ia/ bacit		2 , 2

- 1. Use [◀ / ▶] to select "Settings" in the Home Menu, then press [OK].
- 2. Use [▲ / ▼] to select "Playback", then press [OK].
- 3. Use [▲ / ▼] to select "DVD Rating Level", then press [OK].
- 4. Use [the NUMBER buttons] to enter your 4-digit password.
- 5. Use **[**▲ / **▼]** to select your desired level, then press **[OK]**.
- 6. Press [HOME] to Exit.

	RATING EXPLANATIONS
Off	Parental is inactive; all discs can be played back.
8 [Adult]	DVD software of any grades (adult / general / children) can be played back.
7 [NC-17]	No one under 17.
6 [R]	Restricted; under 17.
5 [PGR]	Parental Guidance Recommended.
4 [PG-13]	Unsuitable for children under 13.
3 [PG]	Parental Guidance suggested.
2 [G]	General Audience.
1 [Kid Safe]	Suitable for children.

■ Password Change

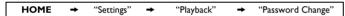

- 1. Use [◀ / ▶] to select "Settings" in the Home Menu, then press [OK].
- 2. Use [▲ / ▼] to select "Playback", then press [OK].
- 3. Use [▲ / ▼] to select "Password Change", then press [OK].
- 4. Use [the NUMBER buttons] to enter your 4-digit password.
- 5. Use [the NUMBER buttons] to enter a new 4-digit password.
- 6. Use [the NUMBER buttons] to retype the same new 4-digit password.
- 7. Use [◀ / ▶] to select "OK", then press [OK].
- 8. Press [HOME] to Exit.

To temporarily disable parental lock:

Some discs allow you to temporarily disable parental lock. With these discs, the message below will appear when you try to play them back. "Enter current password."

Follow the instruction which appears on the TV screen to disable parental lock.

10.4. Software Update



This unit lets you update the software yourself using a software update disc, USB Memory Stick.

The available discs are below:

- BD-RE/-R
- DVD-RW/-R
- CD-RW/-R

■ Disc / USB Memory Stick Update

You can update the software by using a disc or USB Memory Stick.

Prepare a blank disc or USB Memory Stick for software update:

Access <u>www.funaiamerica.com</u>, and download the latest version software to a blank disc or USB Memory Stick using a PC by following the directions described on the website.

- Use a blank disc or USB Memory Stick, download one software per disc or USB Memory Stick. Write the software in the root directory of the disc or USB Memory Stick.
- For more details on how to download the software, please refer to the website.
- 1. Use [◀ / ▶] to select "Settings" in the Home Menu, then press [OK].
- 2. Use [▲ / ▼] to select "Others", then press [OK].
- 3. Use [▲ / ▼] to select "Software Update", then press [OK].
- 4. Use [▲ / ▼] to select "Disc" or "USB Memory Stick", then press [OK].
- 5. Use [◀ / ▶] to select "Yes", then press [OK].
- 6. Insert the disc or connect the USB Memory Stick for software update.
- 7. After loading disc or USB Memory Stick, confirmation message will appear. Select "Yes" and press [OK].
- 8. The unit will restart automatically, then software update will start.
 - · It may take a while to complete the updating.
- 9. After the update finishes, this unit will restart. Remove the disc or the USB Memory Stick from the unit.


A Caution

• Please do not unplug the AC power cord, eject the disc or disconnect the USB Memory Stick or press [(POWER-ON)] to turn the unit to Standby mode while performing a "Disc / USB Memory Stick Update".

Note

· Software update will not change any of the current settings.

10.5. Restore Default Settings

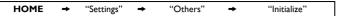

Menus to reset player settings, format a USB Memory Stick.

- 1. Use [◀ / ▶] to select "Settings" in the Home Menu, then press [OK].
- 2. Use [▲ / ▼] to select "Others", then press [OK].
- 3. Use [▲ / ▼] to select "Initialize", then press [OK].
- 4. Use [▲ / ▼] to select the desired setting, then press [OK].

"Reset Settings":

All the settings except for the "Parental" settings will be reset to default.

"Format USB Memory Stick" (Only available when a USB Memory Stick is connected):

Initialize the USB Memory Stick.

"(Unit) Erase Saved BD-ROM Data":

Clears the data saved for the BD-ROM contents, such as BD-ROM game scores, on this player.

"(USB Memory Stick) Erase Saved BD-ROM Data"

(Only available when a USB Memory Stick is connected):

Clears the supplemental data for the BD-ROM playback, such as Subtitle data, from the USB Memory Stick.

- 5. Use [◀ / ▶] to select "Yes", then press [OK].
- 6. Confirmation message will appear. Press [OK] to complete the setting.
- 7. Press [HOME] to Exit.

Caution

 Do not remove the USB Memory Stick while executing "Format USB Memory Stick" or "(USB Memory Stick) Erase Saved BD-ROM Data". It will damage the USB Memory Stick.

⊜ Note

 "Format USB Memory Stick" and "(USB Memory Stick) Erase Saved BD-ROM Data" are not available when a Blu-ray Disc™ is in the unit.

11. TROUBLESHOOTING

Problem	Tip				
No power.	Check the AC power cord, if it is properly connected.				
·	Try another power outlet.				
	Unplug the AC power cord, and wait for about 5-10 seconds. Plug it back				
	in and attempt to power On the unit.				
No sound or picture.	Make sure both the TV and Blu-ray Disc™ player are Turned On.				
	Confirm the connections to the TV are made properly as shown in the "CONNECTIONS" on page 10.				
	Check to see whether the connected TV or another device supports HDCP. (This unit will not output a video signal unless the other device supports HDCP.)				
No reaction to the remote control.	Reduce the distance to infrared sensor window.				
	Confirm that the player's AC power cord is plugged into a power outlet.				
	Check the batteries in the remote control and make sure they are inserted properly by + or - symbols.				
	Aim the remote at the unit's remote receiver. Then press any arrow key and confirm the Power-On indicator dims and blinks when a remote button is pushed. Please check IR signal. Refer to "IR Signal Check" on page 45.				
No Audio / Video signal on the display device via HDMI cable.	If the unit is connected to a non-certified HDMI device, the Audio / Video signal will not output to that device.				
	Make sure the display device is on the correct Input / Video source.				
	Perform the HDMI hotplug: Disconnecting the HDMI cable from the display device, Turn On both devices, and replug the HDMI cable back in.				
	Check with the TV manufacturer, if there are any software updates available for the TV.				
	Check to see if the HDMI cable is a certified version.				
No high-definition video signal on the TV screen.	Does the disc contain high-definition video? High-definition video is only available when the disc contains it.				
	Does the TV support high-definition video? High-definition video is only available when the TV supports it.				
Distorted picture.	Sometimes a small amount of picture distortion may appear. This is not a malfunction.				
Completely distorted picture or black / white picture with Blu-ray Disc [™] / DVD.	Make sure the disc is compatible with this unit.				
No sound or distorted sound.	Adjust the volume.				
	Check to see if the speakers are connected correctly.				
	Check the HDMI connection.				
	Make sure the HDMI cable is not plugged into an HDMI-DVI adapter or Projector which does not handle Digital sound.				
	Check the settings in "Audio Out" menu.				
Picture freezes momentarily during disc	Check the disc for fingerprints / scratches and clean with a soft cloth wiping				
playback.	from the center to the outer edge.				

EN - 40 continued on next page

Problem	Tip
Cannot play back a disc.	Make sure that the disc is playable on this unit.
	Check the region code of the disc. This unit supports the following region codes.
	- Blu-ray Disc™: "A"
	- DVD: "ALL" or "1"
	For DVD-RW/-R, make sure that the disc is finalized.
	Clean the disc.
	Is the disc a newer title? This problem may be solved by software update. Refer to "Software Update" on page 38.
No return to start-up screen when disc is	Soft reset this unit by turning it Off for 30 seconds, then On again.
removed.	To completely reset the unit, press and hold [(b(POWER-ON))] on the
	front panel for 10 seconds to shut down the unit or unplug the AC power
	cord from the AC outlet for 5-10 seconds.
in the upper right hand corner of the TV	The operation is not possible.
screen.	
Buttons do not work or the unit stops	To soft reset the unit, press and hold [(POWER-ON)] on the front
responding.	panel for 10 seconds to shut down the unit or to hard reset the unit by
The unit does not mark and to come an emission	unplugging the AC power cord from the AC outlet for 5-10 seconds. The operations may be prohibited by the disc. Refer to the instructions for
The unit does not respond to some operating commands during playback.	the disc.
The unit cannot read Blu-ray Disc™ / DVD/	Condensation? (Let sit 1 or 2 hours)
CD.	Check to see if the disc is compatible with this unit. (Refer to page 15.)
	Wipe dirt off the disc from the center to the outside or replace the disc.
	Refer to "Cleaning Discs" on page 45.
Scene shooting Angle does not switch.	Angles cannot be switched for Blu-ray Disc™ / DVD which do not contain
	multiple Angles. In some cases multiple Angles are only recorded for specific scenes.
Playback does not start when a Title is selected.	·
The password for rating level has been	Enter the default password "4737", then your forgotten password will be
forgotten.	cleared. Then to change password go to "Password Change" on page 37.
Error message appears when I select "Auto"	Make sure that the unit is connected to a FUNAI brand fun-Link (HDMI
in the "Language".	CEC) TV and the "fun-Link (HDMI CEC)" is set to "On".
	This error message may appear when your TV's OSD language is not
C	supported by this unit.
Cannot play back AVCHD file.	This unit cannot play back stand-alone AVCHD files (*.m2ts, *.mts or *.m2t) written to a DVD. The DVD containing AVCHD files must have a proper file
	and folder structure meeting AVCHD format specifications. Please use
	AVCHD compliant device / software to burn or copy AVCHD files to DVD.
	(Please refer to user manuals of the device / software for more information.)
The capacity of the USB Memory Stick	Data may be written on the USB Memory Stick when a BD-video uses the
decreased. Cannot play back a MPEG-2 video and audio	Virtual Package feature while a USB Memory Stick is connected to the unit. MPEG-2 is not compatible with this unit.
from the USB Memory Stick.	171FEG-2 is not compatible with this unit.
Cannot read the contents on the USB	The USB Memory Stick is not compatible with this unit or the contents may
Memory Stick.	be damaged.
	Try and Turn Off the unit, then turn it back On.
	To soft reset the unit, press and hold [()(POWER-ON)] on the front
	panel for 10 seconds to shut down the unit or to hard reset the unit by
Connet play head; PD Vide -	unplugging the AC power cord from the AC outlet for 5-10 seconds.
Cannot play back BD-Video.	Connect a USB Memory Stick (256MB or more of available memory) which is formatted on this unit. Some discs require memory when playing back
	the content.
	Do not disconnect the USB Memory Stick during playback.

Problem	Tip				
Cannot use BD-Live.	BD-Live function cannot be performed because this unit does not connect				
	the internet.				
Cannot play back 3D.	Some discs may not be played back because this unit does not support 3D.				
Cannot load a Blu-ray Disc™ (stuck in	Unplug unit from AC outlet for 20 seconds. Plug unit back in and press the				
"Loading" mode) and cannot Open the disc	[(OPEN/CLOSE)] on the unit to eject the disc.				
tray to eject the disc.					
The software update screen appears after	Please complete the software update.				
Turning On the unit.	When the software update has failed, the software update screen will keep				
	appearing after turning the unit on. If the software update continues failing,				
	please try it by using a USB Memory Stick with the update software installed				
	in its root directory. In this case, please change the file name as below. "E****UH10000FA1.bin" → "UPDATE10000FA1.BIN"				
	Do not change the numbers. The file name is case sensitive.				
Cannot read a USB Memory Stick.	The format of the USB Memory Stick is not compatible with this unit.				
	Please try and format it on this unit (All data will be deleted).				
Cannot play back JPEG files from a disc.	Cannot play back JPEG files from a disc. Make sure that the disc was				
	recorded in the UDF, ISO9660 or JOLIET format.				
Cannot find a JPEG file.	Make sure that the selected Group (folder) does not contain more than				
	9,999 files for Blu-ray Disc™ / DVD / USB Memory Stick and 999 files for				
	CD.				
	Make sure that the file extension is .jpg / .jPG / .jpeg / or .JPEG.				
No Audio signal from Surround system of the	Make sure the audio system is turned on.				
audio system.	Check the Input mode on the audio system if it is on the correct channel.				
	Check if the Surround system is compatible with either Bitstream or LPCM. If				
	not sure please check the user manual or contact the Surround manufacturer.				
	Once confirmed check the setting in the "Settings" of this unit.				
	Increase the volume level of the Surround system.				

Note

- Do not attempt to repair the Blu-ray Disc™ Player yourself. This may cause severe injury, irreparable damage to your Blu-ray Disc™ Player and void your warranty.
- Please have available your Blu-ray Disc™ Player model and serial number before contacting us. These numbers are available on the cabinet, as well as on the packaging.

12. LANGUAGE CODE LIST

Language	Code	Language	Code	Language	Code	Language	Code
A-B		French [FRE]	5264	Macedonian	5957	Siswat	6565
Abkhazian	4748	Frisian	5271	Malagasy	5953	Slovak [SLO]	6557
Afar	4747	Galician	5358	Malay	5965	Slovenian	6558
Afrikaans	4752	Georgian	5747	Malayalam	5958	Somali	6561
Albanian	6563	German [GER]	5051	Maltese	5966	Spanish [SPA]	5165
Amharic	4759	Greek [GRE]	5158	Maori	5955	Sundanese	6567
Arabic	4764	Greenlandic	5758	Marathi	5964	Swahili	6569
Armenian	5471	Guarani	5360	Moldavian	5961	Swedish [SWE]	6568
Assamese	4765	Gujarati	5367	Mongolian	5960	Т	
Aymara	4771	Hausa	5447	Nauru	6047	Tagalog	6658
Azerbaijani	4772	Hebrew	5451	Nepali	6051	Tajik	6653
Bashkir	4847	Hindi	5455	Norwegian [NOR]	6061	Tamil	6647
Basque	5167	Hungarian [HUN]	5467	O-R		Tatar	6666
Bengali;Bangla	4860	I-K		Occitan	6149	Telugu	6651
Bhutani	5072	Icelandic [ICE]	5565	Oriya	6164	Thai	6654
Bihari	4854	Indonesian	5550	Oromo (Afan)	6159	Tibetan	4861
Bislama	4855	Interlingua	5547	Panjabi	6247	Tigrinya	6655
Breton	4864	Interlingue	5551	Pashto; Pushto	6265	Tonga	6661
Bulgarian [BUL]	4853	Inupiak	5557	Persian	5247	Tsonga	6665
Burmese	5971	Irish [GLE]	5347	Polish [POL]	6258	Turkish [TUR]	6664
Byelorussian	4851	Italian [ITA]	5566	Portuguese [POR]	6266	Turkmen	6657
C-E		Japanese [JPN]	5647	Quechua	6367	Twi	6669
Cambodian	5759	Javanese	5668	Rhaeto-Romance	6459	U-Z	
Catalan	4947	Kannada	5760	Romanian [RUM]	6461	Ukrainian	6757
Chinese [CHI]	7254	Kashmiri	5765	Russian [RUS]	6467	Urdu	6764
Corsican	4961	Kazakh	5757	S		Uzbek	6772
Croatian	5464	Kinyarwanda	6469	Samoan	6559	Vietnamese	6855
Czech [CZE]	4965	Kirghiz	5771	Sangho	6553	Volapuk	6861
Danish [DAN]	5047	Kirundi	6460	Sanskrit	6547	Welsh	4971
Dutch [DUT]	6058	Korean [KOR]	5761	Scots Gaelic	5350	Wolof	6961
English [ENG]	5160	Kurdish	5767	Serbian	6564	Xhosa	7054
Esperanto	5161	L-N		Serbo-Croatian	6554	Yiddish	7155
Estonian	5166	Laothian	5861	Sesotho	6566	Yoruba	7161
F-H		Latin	5847	Setswana	6660	Zulu	7267
Faroese	5261	Latvian;Lettish	5868	Shona	6560		
Fiji	5256	Lingala	5860	Sindhi	6550		
Finnish [FIN]	5255	Lithuanian	5866	Singhalese	6555		

⊜ Note

• If you choose a language that has a 3-letter-language code (written in bracket), the code will be displayed every time you change the Subtitle language setting on page 27 or audio language setting on page 28. If you choose any other languages, "---" will be displayed instead.

13. SPECIFICATIONS

General				
Signal system	NTSC Color			
Power requirements	120 V AC, 60 Hz			
Power consumption	15 W (standby: 0.5 W)			
Dimensions (width x height x depth)	11.1 x 1.6 x 7.8 inches (280.0 x 38.5 x 196.0 mm)			
Weight	2.32 lbs. (1.05kg)			
Operating temperature	41°F (5°C) to 104°F (40°C)			
Operating humidity	Less than 80 % (no condensation)			

	Terminals
USB input TYPE A	
HDMI output	
HDMI jack x 1	Digital Video: 480p, 720p, 1080i, 1080p, 1080p24 / Digital Audio



• The specifications and design of this product are subject to change without notice.

14. MAINTENANCE

■ Servicing

- Please refer to relevant topics on "TROUBLESHOOTING" on page 40 before returning the product.
- If this unit becomes inoperative, do not try to correct the problem by yourself. There are no user-serviceable parts inside. Eject the disc (if possible), disconnect the USB Memory Stick (if connected to the unit), place the unit into Standby mode, unplug the AC power plug, and please contact: 1-877-393-8624 or visit:
 www.funaiamerica.com/support

■ Cleaning the Cabinet

- Wipe the front panel and other exterior surfaces of the unit with a soft cloth.
- Never use a solvent, thinner, benzene or alcohol to clean the unit. Do not spray insecticide liquid near the unit. Such
 chemicals may discolor the surface or damage the unit.

■ Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center to outside. Do not wipe in a circular motion.
- Do not use solvents such as benzine, thinner, commercially available cleaners, detergent, abrasive cleaning agents or antistatic spray intended for analog records.

■ Cleaning the Disc Lens

• If this unit still does not perform properly although you refer to the relevant sections and to "TROUBLESHOOTING" in this user manual, the laser optical pickup unit may be dirty. Consult your dealer or an Authorized Service Center for inspection and cleaning of the laser optical pickup unit.

■ Disc Handling

- Handle the discs so that fingerprints and dust do not adhere to the surfaces of the discs.
- Always store the disc in its protective case when it is not used.
- Note that discs with special shapes (heart-shaped discs, octagonal discs, etc.) cannot be played back on this unit. Do not attempt to play such discs, as they may damage the unit.

■ IR Signal Check

If the remote control does not work properly, you can test IR signal using a digital camera (including a cellphone with a built-in camera) to see if the remote control sends out the infrared signal.

- 1. Turn On the digital camera.
- Direct a digital camera to the remote control, then press and hold any button on the remote control.
- · If infrared light appears on the digital camera display, the remote control is working.



15. TRADEMARK INFORMATION



"Blu-ray Disc™", "Blu-ray" and "Blu-ray Disc™" logo are trademarks of the Blu-ray Disc Association.

BONUS VIEW™

"BONUSVIEW™" and "BONUSVIEW™" logo are trademarks of the Blu-ray Disc Association.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Java and all Java based trademarks and logos are trademarks or registered trademarks of Oracle and/or its affiliates.



For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. c DTS, Inc. All Rights Reserved.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

x.v.Color

"x.v.Color" and "x.v.Color" logo are trademarks of Sony Corporation.



is a trademark of DVD Format/Logo Licensing Corporation.



"AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.



KODAK and the KODAK trade dress are trademarks of Kodak used under license.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L. C. SEE HTTP://WWW.MPEGLA.COM

THIS PRODUCT IS LICENSED UNDER THE VC-1
PATENT PORTFOLIO LICENSE FOR THE PERSONAL
AND NON-COMMERCIAL USE OF A CONSUMER TO
(i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1
STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE
VC-1 VIDEO THAT WAS ENCODED BY A
CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED
FROM A VIDEO PROVIDER LICENSED TO PROVIDE
VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE
IMPLIED FOR ANY OTHER USE. ADDITIONAL
INFORMATION MAY BE OBTAINED FROM MPEG LA,
L.L.C. SEE HTTP://WWW.MPEGLA.COM

16. GLOSSARY

AACS

Advanced Access Content System (AACS) is the content protection scheme used with Blu-ray discs.

Analog Audio

An electrical signal that directly represents sound. Compare this to digital audio which can be an electrical signal, but is an indirect representation of sound. See also "Digital Audio".

Aspect Ratio

The width of a TV screen relative to its height. Conventional TVs are 4:3 (in other words, the TV screen is almost square); widescreen models are 16:9 (the TV screen is almost twice as wide as its height).

AVCHD

AVCHD is a new format for high definition video camcorders which can record and play high-resolution HD images.

Blu-ray Disc™

Blu-ray Disc[™] is a next generation optical video disc which is capable of storing much more data than a conventional DVD. The large capacity makes it possible to benefit from the features such as high-definition videos, multi-channel surround sounds, interactive menus and so on.

Chapter

Just as a book is split up into several chapters, a Title on a BD-video or DVD-video is usually divided into chapters. See also "Title".

Cinavia[™]

Cinavia Notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted. More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at http://www.cinavia.com

To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2014 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

Digital Audio

An indirect representation of sound by numbers. During recording, the sound is measured at discrete intervals (44,100 times a second for CD audio) by an analog-to-digital converter, generating a stream of numbers. On playback, a digital-to-analog converter generates an analog signal based on these numbers. See also "Sampling Frequency" and "Analog Audio".

Dolby Digital

The system to compress digital sound developed by Dolby Laboratories. It offers you sound of stereo (2ch) or multi-channel audio.

Dolby Digital Plus

Dolby Digital Plus is the next generation digital audio compression technology developed as an extension to Dolby Digital. Blu-ray Disc™ supports 7.1 multi-channel surround sound output.

Dolby TrueHD

Dolby TrueHD is a lossless coding technology developed for next generation optical discs. Blu-ray Disc™ supports 7.1 multi-channel surround sound output.

DTS® (Digital Theater System)

DTS[®] is a multi channel surround sound system. You can enjoy movie dynamic and realistic sound like movie theater. DTS surround sound technologies were developed by DTS, Inc.

DTS-HD®

DTS-HD[®] is a lossless coding technology developed as an extension of the original DTS Coherent Acoustics format. Blu-ray Disc™ supports 7.1 multi-channel surround sound output.

HDMI (High-Definition Multimedia Interface)

A digital interface between an audio and video Source. It can transmit component video, audio, and control signal with one cable connection.

JPEG (Joint Photographic Experts Group)

JPEG is a method of compressing still picture files. You can copy JPEG files on BD-RE/-R, DVD-RW/-R, CD-RW/-R, or USB Memory Stick from a computer and play back the files on this unit.

Local Storage

A storage area of sub contents for playing virtual packages on BD-video.

PCM (Pulse Code Modulation)

The most common system of encoding digital audio, found on CD and DAT. Excellent quality, but requires a lot of data compared to formats such as Dolby Digital and MPEG audio. For compatibility with digital audio recorders (CD, MD and DAT) and AV amplifiers with digital Inputs, this unit can convert Dolby Digital, DTS, and MPEG audio to PCM. See also "Digital Audio".

Region Code

Regions associate discs and players with particular areas of the world. This unit will only play back discs that have compatible region codes. You can find the region code of your unit by looking on the rear panel. Some discs are compatible with more than one region (or all regions).

Sampling Frequency

The rate which sound is measured by a specified interval to turn into digital audio data. The numbers of sampling in one second defines as sampling frequency. The higher the rate, the better the sound quality.

Title

A collection of chapters on BD-video or DVD-video. See also "Chapter".

Track


Audio CD uses Tracks to divide up the content of a disc. The BD-video or DVD-video equivalent is called a Chapter. See also "Chapter".

x.v.Color

"x.v.Color" is a promotion name given to the products that have the capability to realize a wide color space based on the xvYCC specifications and is a trademark of Sony Corporation.

17. ESPAÑOL

17.1. Mando a Distancia

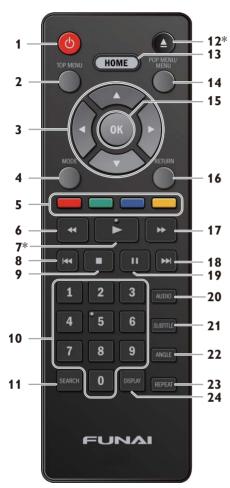

 La unidad también se puede encender pulsando estos botones.

1. Botón 🕁 (ENCENDIDO)

 Pulse el botón para encender la unidad, o para pasar la unidad al modo de espera. (Para apagar completamente la unidad, debe desconectar el cable de alimentación de CA.)

2. Botón TOP MENU

Blu-ray Disc™: Púlselo para mostrar el menú superior. **DVD:** Púlselo para mostrar el menú de títulos.

3. Botones de **▲** / ▼ / **∢** / **▶**

· Púlselos para seleccionar elementos o configuraciones.

4. Botón MODE

 Durante la reproducción, púlselo para visualizar el menú de reproducción.

5. Botones de ROJO / VERDE / AZUL / AMARILLO

 Púlselo para activar las teclas de atajo en algunas funciones de BD-vídeo. Cuando se despliega la lista de archivos, presione para cambiar las páginas.

6. Botón ◀◀ (REVERSO)

• Durante la reproducción, púlselo para invertir rápido la reproducción.

7. Botón ▶ (REPRODUCIR)*

· Púlselo para iniciar o reanudar la reproducción.

8. Botón ◄ (SALTAR)

- Durante la reproducción, púlselo una vez para volver al comienzo del título, capítulo, pista o archivo actual.
- Durante la reproducción, pulse dos veces sobre la tecla para volver al título, capítulo, pista o archivo anterior.
- Durante la reproducción de archivos JPEG, púlselo para volver al archivo anterior.

9. Botón **■** (DETENER)

• Púlselo para detener la reproducción.

10. Botones NUMÉRICOS

- Púlselos para seleccionar un capítulo durante la reproducción.
- Púlselos para introducir números en el campo de entrada.

11. Botón SEARCH

• Púlselos para mostrar el menú de buscar.

12. Botón ▲ (ABRIR/CERRAR)*

• Púlselo para cerrar o abrir la bandeja para discos.

13. Botón HOME

• Púlselo para mostrar el menú de inicio.

14. Botón POP MENU/MENU

Blu-ray Disc™: Púlselo para mostrar el menú emergente. **DVD:** Púlselo para mostrar el menú del disco.

15. Botón OK

• Púlselo para confirmar o seleccionar elementos de menú.

16. Botón RETURN

 Púlselo para volver a la pantalla de funciones o menú mostrado anteriormente.

17. Botón ▶▶ (ADELANTAR)

- Durante la reproducción, púlselo para avanzar rápido la reproducción.
- Cuando la reproducción esté en pausa, púlselo para avanzar lentamente la reproducción.

18. Botón ▶▶ (SALTAR)

- Durante la reproducción, púlselo para saltar al siguiente capítulo, pista o archivo.
- Cuando la reproducción esté en modo de pausa, púlselo para avanzar la reproducción imagen a imagen.

19. Botón 📳 (PAUSAR)

• Púlselo para pausar la reproducción.

20. Botón AUDIO

 Púlselo para seleccionar el canal de sonido (como idiomas de sonido) de un disco.

21. Botón SUBTITLE

• Púlselo para seleccionar los subtítulos de un disco.

22. Botón ANGLE

 Púlselo para acceder a distintos ángulos de cámara del disco.

23. Botón REPEAT

· Presione para seleccionar el modo de repetición.

24. Botón DISPLAY

 Púlselo para visualizar el menú desplegable en pantalla.

⊜ Nota

- El indicador Encendido en el panel frontal se atenúa y parpadea cuando se recibe la señal IR del control remoto.
- Use el control remoto suministrado. No se garantiza la operación de control remoto en cualquier otro control remoto, tal como un control remoto universal.

17.2. Encontrar el Canal de Video en su Televisor

Revise los siguientes pasos despues de haber completado todas las conexiones a su TV.

- 1. Presione [(b) (ENCENDIDO)] para Encender la unidad.
- 2. Encienda su televisor.
- 3. Busque el boton Source / Input / AUX / Video en el control remoto del televisor. El boton puede variar en funcion de la marca y el modelo del televisor. Una vez localizado el boton presione hasta ver "Please Wait..." o "Welcome!" en la pantalla.



Esta es la visualización correcta de la entrada de la fuente de video.

- Si la TV está conectada por medio de un cable HDMI, puede tomar algunos minutos para que aparezca la imagen de abertura.
- Cuando pase cierto tiempo sin que haya conectado la unidad aparecera la solo pantalla de bienvenida la primera vez que conecte la unidad.

17.3. Instalacion Inicial

Por favor, siga las instrucciones que se exponen a continuacion para completar la configuracion inicial.

- 1. Utilice [▲ / ▼] mientras se presenta la pantalla de bienvenida para seleccionar "Next" y pulse luego [OK].
- 2. Aparece la pantalla de configuracion del idioma. Utilice [▲ / ▼] para seleccionar su idioma y pulse luego [OK].



- 3. Aparece la pantalla de "Modo de Inicio Rápido". Utilice [▲ / ▼] para seleccionar el modo deseado y pulse luego [OK].
- Aparece la pantalla de "Comprueba automaticamente si hay un software mas reciente". Utilice [▲ / ▼] para seleccionar el modo deseado y pulse luego [OK].
- 5. Aparece la pantalla de configuracion de la red. Utilice [▲ / ▼] para seleccionar el modo deseado y pulse luego [OK].

■ Cómo restablecer el Idioma OSD

Puede restablecer el idioma OSD si seleccionó el ajuste de idioma equivocado.

- 1. Presione [HOME] para desplegar el Menú de Inicio.
- Utilice [▲ / ▼ / ◀ / ▶] para seleccionar ", despés presione [OK].
 - Esta partida es "Settings" (inglés) / "Configuaraciones" (español) / "Paramètres" (francés).
 - · A partir de aquí, por favor seleccione una de las siguientes partidas que puede encontrar en la pantalla:
- 3. Utilice [▲ / ▼] para seleccionar "Playback" (inglés) / "Reproducción" (español) / "Lecture" (francés), y después presione [OK].
- Utilice [▲ / ▼] para seleccionar "Language" (inglés) / "Idioma" (español) / "Langue" (francés), y después presione [OK].
- 5. Utilice [▲ / ▼] para seleccionar el idioma que desee, después presione [OK].
- 6. Si las partidas de ajuste se despliegan en el idioma que seleccionó, presione [HOME] para salir.



LIMITED WARRANTY

FUNAI CORP. will repair this product, free of charge in the USA in the event of defect in materials or workmanship as follows:

DURATION:

PARTS: FUNAI CORP. will provide parts to replace defective parts without charge for one (1) year from the date of original retail purchase. Certain parts are excluded from this warranty.

LABOR: FUNAl CORP. will provide the labor without charge for a period of ninety (90) days from the date of original retail purchase.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) days labor and parts limited warranty.

LIMITS AND EXCLUSIONS:

THIS WARRANTY IS EXTENDED ONLY TO THE ORIGINAL RETAIL PURCHASER.A PURCHASE RECEIPT OR OTHER PROOF OF ORIGINAL RETAIL PURCHASE WILL BE REQUIRED TOGETHER WITH THE PRODUCT TO OBTAIN SERVICE UNDER THIS WARRANTY.

This warranty shall not be extended to any other person or transferee.

This warranty is void and of no effect if any serial numbers on the product are altered, replaced, defaced, missing or if service was attempted by an unauthorized service center. This limited warranty does not apply to any product not purchased and used in the United States.

This warranty only covers failures due to defects in material or workmanship which occur during normal use. It does not cover damage which occurs in shipment, or failures which are caused by repairs, alterations or products not supplied by FUNAI CORP., or damage, which results from accident, misuse, abuse, mishandling, misapplication, alteration, faulty installation, improper maintenance, commercial use such as hotel, rental or office use of this product, or damage which results from fire, flood, lightning or other acts of God. THIS WARRANTY DOES NOT COVER PACKING MATERIALS, ANY ACCESSORIES (EXCEPT REMOTE CONTROL), ANY COSMETIC PARTS, COMPLETE ASSEMBLY PARTS, DEMO OR FLOOR MODELS. FUNAI CORP.AND ITS REPRESENTATIVES OR AGENTS SHALL IN NO EVENT BE LIABLE FOR ANY GENERAL, INDIRECT OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR OCCASIONED BY THE USE OF OR THE INABILITY TO USE THIS PRODUCT. THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND OF ALL OTHER LIABILITIES ON THE PART OF FUNAI, ALL OTHER WARRANTIES INCLUDING THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED BY FUNAI AND ITS REPRESENTATIVES IN THE UNITED STATES.

ALL WARRANTY INSPECTIONS AND REPAIRS MUST BE PERFORMED BY AN AUTHORIZED SERVICE CENTER. THIS WARRANTY IS ONLY VALID WHEN THE UNIT IS CARRIED-IN TO AN AUTHORIZED SERVICE CENTER. THE PRODUCT MUST BE ACCOMPANIED BY A COPY OF THE ORIGINAL RETAIL PURCHASE RECEIPT. IF NO PROOF OF PURCHASE IS ATTACHED, THE WARRANTY WILL NOT BE HONORED AND REPAIR COSTS WILL BE CHARGED.

IMPORTANT:

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. IF, AT ANY TIME DURING THE WARRANTY PERIOD, YOU ARE UNABLE TO OBTAIN SATISFACTION WITH THE REPAIR OF THIS PRODUCT, PLEASE CONTACT FUNAI CORP.

ATTENTION:

FUNAI CORP. RESERVES THE RIGHT TO MODIFY ANY DESIGN OF THIS PRODUCT WITHOUT PRIOR NOTICE. WARRANTY STATEMENT REGARDING NON AUTHORIZED REPAIRS:

To obtain warranty service, you must take the product, or deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any AUTHORIZED SERVICE CENTER. FUNAI CORP. will not reimburse you for any service done by unauthorized service providers without prior written approval.

To locate your nearest AUTHORIZED SERVICE CENTER or for general service inquiries, please contact us at:

FUNAI SERVICE CORPORATION Tel: 1-877-39-Funai (1-877-393-8624) www.funaiamerica.com

2200 Spiegel Drive, Groveport, OH 43125