

Blu-ray Disc™ / DVD Player Setup Manual



FWBP706F

See the Online Owner's Manual for details:
sanyo-av.com

 
- 1 Please visit website sanyo-av.com
- 2 Select Download.
- 3 Type in the Model # "FWBP706F" and click "Search".
- 4 Select the Manual and click on "Download".

Register Online at sanyo-av.com/support/ today to get the most benefits from your purchase.
Registering your model with SANYO makes you eligible for all of the valuable benefits such as software upgrades and important product notifications.
Register Online at sanyo-av.com/support/




© 2016 Funai Electric Co., Ltd.
Printed in China
ECR01UH
2VMN00250 ★★★★★

1 Connections

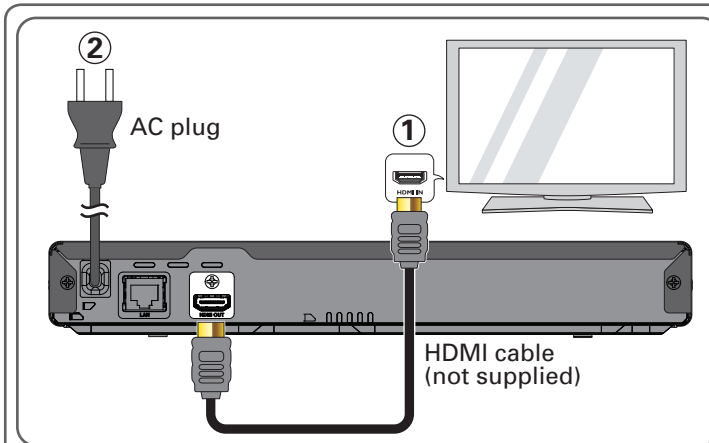

Wireless and Wired Connections

 
You need to configure network settings in order to use Internet services.

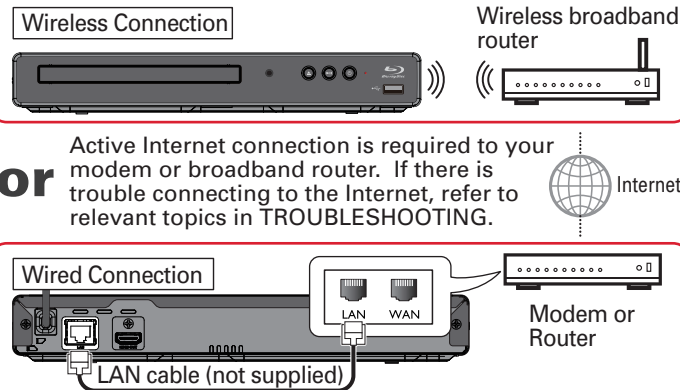

Active Internet connection is required to your modem or broadband router. If there is trouble connecting to the Internet, refer to relevant topics in TROUBLESHOOTING.

2 Initial Setup

 Turn On the unit and your TV, then select the input on your TV.

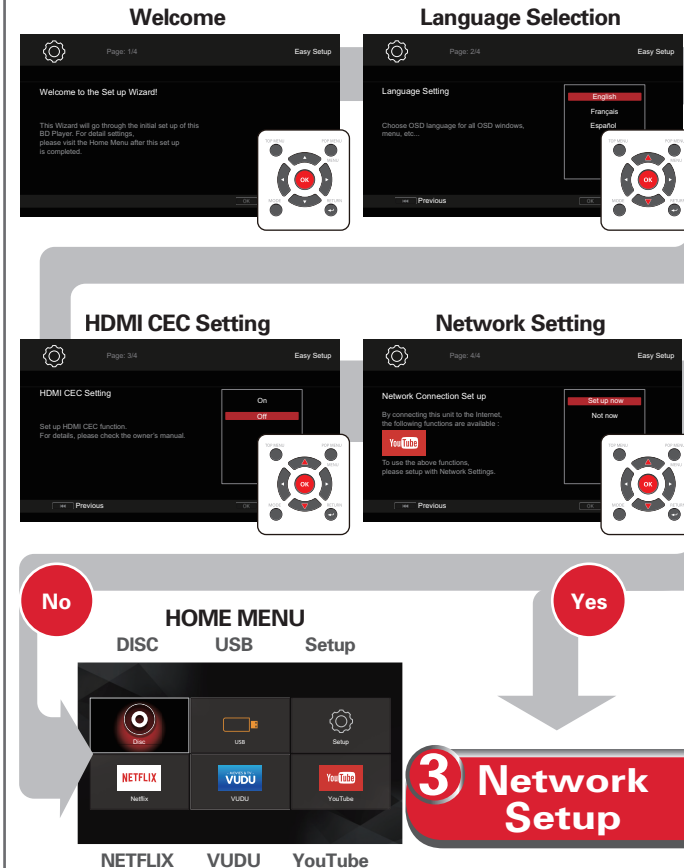

Troubleshooting

Problem	Tip
No power.	• Check if the AC power cord is properly connected. • Unplug the AC power cord, and wait for about 5-10 seconds. Plug it back in and attempt to Power On the unit.
No sound or picture.	• Make sure both the TV and Blu-ray Disc™ player are turned On. • Confirm the connections to the TV are made properly as shown in CONNECTIONS, then select the input on your TV.
No reaction to the remote control.	• Confirm that the player's AC power cord is plugged into a power outlet. • Check the batteries in the remote control, and make sure they are inserted properly by + or - symbols.
No sound or distorted sound.	• Adjust the volume. • Make sure the HDMI cable is not plugged into an HDMI-DVI adapter which does not handle Digital sound.
Cannot play back a disc.	• Make sure that the product supports the disc. • Check the region code of the disc. This unit supports the following region codes: - Blu-ray Disc™: "A" - DVD: "ALL" or "1" • Clean the disc.
Cannot connect to the network.	• Check to see if the modem / router has Power turned On. • Confirm, if the Internet light is showing activity (light blinking) on the modem / router. • Turn Off this unit and the modem/router (if it has a Power button), then unplug their AC cords. After 30 seconds, plug them back in and turn the devices back On. If you have a telephone / Internet modem with your cable service, then you may have to use its reset button or remove the backup battery to reset this type of modem. Now wait for the lights to show activity and try reconnecting. • Check the cable connections to the router when connecting with a LAN cable. • Confirm the security protocol of the router. WPS (Wi-Fi Protected Setup) cannot be used if the security protocol is set to "WEP". • If none of the above suggestions fix the issue, please contact your ISP (Internet Service Provider) for further assistance. • Once you have activated the wireless connection, please wait 30 seconds for the connection to be established after turning On the unit, before trying to access network features such as BD-Live™ and the third-party network services.

If you do not find a solution above, please visit our website sanyo-av.com for the Online Owner's Manual.

 
Please download it and then refer to "TROUBLESHOOTING" section for more information.

Remote Control



1. **POWER-ON**
Press to turn On the unit, or to switch the unit into Standby mode. (To completely turn Off the unit, you must unplug the AC power cord.)
2. **CURSOR**
Press to select items or settings.
3. **OK**
Press to confirm or select menu items.
4. **MODE**
During playback, press to display the Play Menu to configure playback functions such as Search, Repeat, Angle, etc.
5. **PLAY/PAUSE**
Press to start playback or resume playback.
Press to Pause playback.
6. **SUBTITLE/AUDIO**
Press to select Subtitles or Audio Channel (such as audio languages) on a disc.
7. **OPEN/CLOSE**
Press to Open or Close the disc tray.
8. **HOME**
Press to display the Home Menu.
9. **RETURN**
Press to Return to the previously displayed menu or screen function.
10. **YouTube/NETFLIX/VUDU**
Press to Launch VOD.

INSERT BATTERIES
Install 2 AAA (1.5V) batteries
(not supplied)

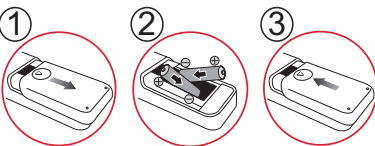

3 Network Setup

Wireless

Select "Network" → "Interface" → "Wireless".

Select the desired wireless setup method.

Scan

The unit automatically searches for nearby wireless access points.

Select the SSID (wireless access point) to connect to.

Password entry screen appears.

Enter the password of your wireless router.

Select "Enter", then press **OK**.

At the confirmation screen, select **[Next]** to move on.

Wireless connection process now starts.

Connection failure message appears.

Connection success message appears.

Wireless network setting is completed.
You are ready to enjoy network features over Wirelessly!

Wired

Select "Network" → "Interface" → "Ethernet".

Connect a LAN cable, and then configuration will automatically be performed.

How to check the connection

Select "Network" → "Connection Test".

Select the desired wireless setup method.

NOTE(s):

- If you are experiencing signal issues with your wireless connection, please confirm that your wireless router is placed close enough to the unit.

PBC Please push PBC button on your access point.

If your router has a PBC* (Push Button Configuration) button, you can use "PBC" which is the easiest way to set up a wireless connection.

If your router does not have it, please use the "Scan" setup.

* PBC button may be called WPS button on your wireless router.

Please verify your settings and try again.
For detailed instructions, refer to the Online Owner's manual.
sanyo-av.com

SANYO is a registered trademark of SANYO Electric Co., Ltd. and is used by Funai Electric Co., Ltd. and Funai Corporation, Inc. under license from SANYO Electric Co., Ltd. Any liability related to SANYO products, including design and quality, is the sole responsibility of Funai Electric Co., Ltd. and Funai Corporation, Inc. Please contact Funai Corporation, Inc. for any questions or claims related to SANYO products: sanyo-av.com

Safety Instructions

The Model and Serial Numbers of this Unit may be found on the cabinet. You should Record and Retain those Letters / Numbers for future reference. Please refer to the LIMITED WARRANTY for more information.

Model No.:
Serial No.:

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE. APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The important note and rating are located on the rear or bottom of the cabinet.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

☐ The symbol for CLASS II (Double Insulation)

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.

Instrucciones de Seguridad

El modelo y el número de serie de esta unidad se pueden encontrar en la caja. Deberá anotar y guardar el modelo y el número de serie para consultarlos, si los necesita, en el futuro. Por favor consulte la LIMITED WARRANTY para mayor información.

Número de modelo:
Número de serie:

ADVERTENCIA:
PARA REDUCIR EL RIESGO DE QUE SE PRODUZCA UN INCENDIO O SE RECIBA UNA DESCARGA ELÉCTRICA, NO EXPONGA ESTE APARATO A LA LLUVIA NI A LA HUMEDAD. NO SE DEBERA EXPONER EL APARATO NI A GOTERAS NI A SALPICADURAS, Y NO DEBERÁ COLOCARSE NINGÚN OBJETO QUE CONTENG A LIQUIDOS SOBRE EL APARATO, COMO POR EJEMPLO JARRONES.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



AVISO:
PARA REDUCIR EL RIESGO DE SUFRIR UNA DESCARGA ELÉCTRICA NO quite la cubierta (o el panel posterior). EN EL INTERIOR DEL APARATO NO HAY PIEZAS QUE DEBA MANIPULAR EL USUARIO. SOLICITE EL SERVICIO DE REPARACIONES AL PERSONAL DE SERVICIO CUALIFICADO.

Las notas importantes y la calificación se encuentran ubicadas en la parte posterior o inferior del gabinete.



El símbolo del rayo con punta de flecha, en el interior de un triángulo equilátero, tiene la finalidad de avisar al usuario de la presencia de “tensión peligrosa” dentro de la caja del aparato que podría ser de suficiente intensidad como para constituir un riesgo para las personas en caso de que éstas recibiesen una descarga eléctrica.



El signo de exclamación dentro de un triángulo equilátero tiene la finalidad de avisar al usuario de la presencia de instrucciones de utilización y mantenimiento (servicio) en el material impreso que acompaña al aparato.

☐ Símbolo de CLASE II (doble aislamiento)

IMPORTANTES INSTRUCCIONES DE SEGURIDAD

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC WARNING
This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

Disconnect the mains (AC) plug to shut the unit Off when trouble is found or when not in use. The mains (AC) plug shall remain readily available. To completely turn Off the unit, you must unplug the mains (AC) power cord.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
WARNING: Batteries (Battery pack or battery installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling unit can cause serious injury or even death.

1. Lea estas instrucciones.
2. Conserve estas instrucciones.
3. Preste atención a las advertencias.
4. Siga todas las instrucciones.
5. No utilice este aparato cerca del agua.
6. Limpie el aparato sólo con un paño seco.
7. No obstruya ninguna de las ranuras de ventilación. Realice la instalación según las instrucciones del fabricante.
8. No instale el equipo cerca de elementos para calefaccionar tales como radiadores, rejillas de calefacción, estufas eléctricas u otros aparatos (incluidos amplificadores).
9. No desarme el dispositivo de seguridad del enchufe polarizado o con conexión a tierra. Un enchufe polarizado contiene dos clavijas, una más ancha que otra. Un enchufe con conexión a tierra contiene dos clavijas y una tercera clavija con conexión a tierra. La clavija ancha del enchufe polarizado o la clavija de conexión a tierra representan dispositivos de seguridad. Si el enchufe del aparato no entra en el tomacorriente, consulte con un electricista para reemplazar sus antiguos tomacorrientes.
10. Asegúrese de proteger el cable de alimentación de las pisadas o torsiones especialmente en la zona de la clavija, en el receptáculo y en el punto donde el cable sale del aparato.
11. Utilice únicamente los accesorios que especifica el fabricante.
12. Utilice únicamente el carro, atril, trípode, soporte o la mesa que especifica el fabricante o que se vendió junto con el aparato. Cuando utilice un carro, sea cuidadoso al trasladar el conjunto carro/aparato para evitar daños por caídas de objetos.
13. Desenchufe este aparato si hay tormentas eléctricas o durante largos periodos de inactividad.
14. Confíe el servicio técnico sólo a personal calificado. El servicio técnico es necesario cuando el aparato sufre algún tipo de daño, por ejemplo cuando se dañan los cables de suministro eléctrico o la clavija, cuando se derrama líquido o se caen objetos sobre el aparato, cuando se lo expone a la lluvia o a humedad, cuando no funciona adecuadamente o cuando se cae.



No coloque la unidad sobre un mueble que pueda volcar si algún niño o adulto lo inclina, empuja, se coloca encima o trepa por él. La caída de la unidad puede provocar lesiones graves e incluso la muerte.

El aparato no debe colocarse en una instalación empotrada (por ejemplo: una biblioteca o un estante) a menos que cuente con la adecuada ventilación. Asegúrese de dejar un espacio de 5,9 pulgadas (15 cm), o más, alrededor del aparato.

Nunca use un desempolvador a gas en esta unidad.
El gas del interior de la unidad puede inflamarse y explotar.

RADIO-TV INTERFERENCE
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio / TV technician for help.

LASER SAFETY
This apparatus is classified as a CLASS 1 LASER PRODUCT. This apparatus employs a laser. Only a qualified service person should remove the cover or attempt to service this apparatus, due to possible eye injury.

CLASS 1 LASER PRODUCT
PRODUCT COM LASER CLASS 1

CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

IMPORTANT COPYRIGHT INFORMATION
Unauthorized copying, broadcasting, public performance and lending of discs are prohibited. This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

This apparatus should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided. Make sure to leave a space of 5.9 inches (15 cm) or more around this apparatus.

Never use a gas duster on this unit.
The gas trapped inside of this unit may cause ignition and explosion.



ENERGY STAR® is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy helping us all save money and protect the environment through energy efficient products and practices.

Supplied Accessories

- Remote Control (NC450UH)
- Setup Manual

Servicing

- If this unit becomes inoperative, do not try to correct the problem by yourself. There are no User-serviceable Parts inside. Eject the disc (if possible), disconnect the USB Memory Stick (if connected), place the Unit into Standby mode, Unplug the Power Plug, and then please visit: sanyo-av.com

Trademark Information



“Blu-ray Disc™”, “Blu-ray” and “Blu-ray Disc™” logo are trademarks of the Blu-ray Disc Association.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



“BD-Live™” and “BD-Live™” logo are trademarks of the Blu-ray Disc Association.



 is a trademark of DVD Format/ Logo Licensing Corporation.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



“AVCHD” and the “AVCHD” logo are trademarks of Panasonic Corporation and Sony Corporation.



Java and all Java based trademarks and logos are trademarks or registered trademarks of Oracle and/ or its affiliates.



The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance.

Limited Warranty

NINETY (90) DAY LABOR / ONE (1) YEAR PARTS

WARRANTY COVERAGE:
This warranty obligation is limited to the terms as set forth below.
WHO IS COVERED:
This product warranty is issued to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase (“Warranty Period”) from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.
WHAT IS COVERED:
This warranty covers new products if a defect in material or workmanship occurs and a valid claim is received within the Warranty Period. At its option, the company will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in current inventory, or (3) refund the original purchase price of the product.
Replacement products or parts provided under this warranty are covered against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product’s warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes company property. When a refund is given, your product becomes company property.
Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.
Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.
WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:
This Limited Warranty applies only to new company manufactured products that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any hardware product or any software, even if packaged or sold with the product, as manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.
The company is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or other additional product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.
This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-supplied product, (b) to damage caused by service performed by anyone other than company approved Authorized Service Location, (c) to a product or a part that has been modified without written company permission, or (d) if any serial number has been removed or defaced, or (e) product, accessories or consumables sold “AS IS” without warranty of any kind by including refurbished product sold “AS IS” by some retailers.
This Limited Warranty does not cover:

- Shipping charges to return defective product.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of the company.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner’s Manual.

TO OBTAIN ASSISTANCE...
Contact the Customer Care Center at: 1 866 212 0436
REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER, WITH THE ISSUING COMPANY NOT LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.
Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

FUNAI CORPORATION, Inc. 19900 Van Ness Avenue, Torrance, CA 90501

Playable Media and Format

Media

- BD-video
- CD-DA

- BD-RE-R
- CD-RW/R

- DVD-video
- DTS-CD

- DVD-RW/R
- USB Memory Stick

Disc and USB Memory Stick Playable Format

- AVCHD (only for DVD)
- PNG

- MP3
- AAC

- JPEG
- FLAC

License

This product includes some open source software that is subject to the GNU General Public License (GPL), GNU Lesser General Public License (LGPL) and/or copyright licenses, disclaims and notices. You can confirm further information about these in the “Copyright” section in “Setup” of this product. If you are interested in obtaining GPL source code used in this product, please contact FUNAI SERVICE CORPORATION 2425 Spiegel Drive, Groveport, OH 43125 sanyooss@funaiservice.com

See the Online Owner’s Manual for details: sanyo-av.com